

Type	Device	Brand	Codes
-	AUDIO	AIWA	0585,0885,0786,0687
-	AUDIO	APEX	0245
-	AUDIO	APPLE IPOD	0190
-	AUDIO	BOSE	0868,0079,0179
-	AUDIO	CARVER	0184
-	AUDIO	CENTRIOS	1107,0087
-	AUDIO	CITIZEN	0284
-	AUDIO	CRITERION	0446
-	AUDIO	DELPHI	0472
-	AUDIO	DENON	0981,0383,0886
-	AUDIO	FISHER	0083,0783
-	AUDIO	GOLDSTAR	0278
-	AUDIO	HARMAN KARDON	0082,0483
-	AUDIO	IPOD	0090
-	AUDIO	JVC	0680,0982,0583
-	AUDIO	KENWOOD	0969,0482,0283,0484,0884,0588
-	AUDIO	KOSS	0143
-	AUDIO	MAGNAVOX	0281,0083,0193,0277
-	AUDIO	MARANTZ	0470,0084
-	AUDIO	MITSUBISHI	0389
-	AUDIO	NAD	0773,0575,0975
-	AUDIO	NEO	0174
-	AUDIO	NEXXTECH	1107,0679,0879,0480,0580,0584,0087,0787
-	AUDIO	NORCENT	0494
-	AUDIO	ONKYO	0182,0782,0882,0199
-	AUDIO	OPTIMUS	0368,0376,0476,0576,0776,0876,0077,0980
-	AUDIO	PANASONIC	0780,0682,0183,0983,0987,0088,0099,0696
-	AUDIO	PHILIPS	0177,0083,0983,0084,0184,0277,0377
-	AUDIO	PIONEER	0385,0288,0388,0489,0299
-	AUDIO	RADIO SHACK	0272,0077,0980,0282,0188,0288,0388,0488,0189,0489,0589
-	AUDIO	RCA	0373,0274,0878,0779,0181,0384,0186,0288,0388,0688,0788,0888,0189,0489,0589,0546,0693
-	AUDIO	REALISTIC	0883
-	AUDIO	RIO	0142,0380
-	AUDIO	SABA	0593
-	AUDIO	SAMSUNG	0047
-	AUDIO	SANYO	0172
-	AUDIO	SCOTT	0478
-	AUDIO	SHARP	0768,0070,0582
-	AUDIO	SHERWOOD	0272,0282,0487,0587
-	AUDIO	SIRIUS	0276,0070
-	AUDIO	SKYFI	0174
-	AUDIO	SONY	0933,0479,0579,0180,0381,0481,0581,0984,0085,0185,0285,0985,0200
-	AUDIO	TAO	0174
-	AUDIO	TEAC	0672,0382,0187,0287,0387
-	AUDIO	TECHNICS	0780,0682,0183,0983,0987,0088
-	AUDIO	TEVION	0446
-	AUDIO	VENTURER	0176
-	AUDIO	XM RADIO	0472,0174
-	AUDIO	YAMAHA	0781,0881,0485,0685,0785,0286,0386,0486,0586,0378
-	AUDIO	ZENITH	0269,0674,0576,0577,0178,0278,0080,0083,0380,0686,0142
-	CABLE	ABC	0747,0947,0048,0148,0248
-	CABLE	ADELPHIA	0852,0752
-	CABLE	ALLEGRO	0054,0154
-	CABLE	AMERICAST	0354
-	CABLE	ANTRONIX	0448,0548
-	CABLE	ARCHER	0448,0548,0648,0748
-	CABLE	AT&T	0752
-	CABLE	BELL SOUTH	0354
-	CABLE	CABLETENNA	0448
-	CABLE	CABLEVIEW	0448
-	CABLE	CABLEVISION	0252
-	CABLE	CENTURY	0748
-	CABLE	CITIZEN	0748
-	CABLE	COGECO	0752
-	CABLE	COLOR VOICE	0848,0948
-	CABLE	COMCAST	0752
-	CABLE	COMTRONICS	0049,0149
-	CABLE	CONTEC	0249
-	CABLE	DIGITAL MUSIC EXPRESS	0053
-	CABLE	EASTERN	0349
-	CABLE	EVERQUEST	0049
-	CABLE	GARRARD	0748
-	CABLE	GC ELECTRONICS	0548
-	CABLE	GE	0556
-	CABLE	GEMINI	0255,0549
-	CABLE	GENERAL INSTRUMENT (GI)	0552,0747,0148,0752,0952,0453,0654,0754,0053,0048,0947
-	CABLE	HAMLIN	0747,0649,0749,0849
-	CABLE	HITACHI	0947
-	CABLE	ILLICO	0252
-	CABLE	JASCO	0748
-	CABLE	JERROLD	0552,0747,0148,0453,0947,0048,0653,0254
-	CABLE	MAGNAVOX	0150
-	CABLE	MEMOREX	0250
-	CABLE	MOTOROLA	0552,0148,0952,0453,0654,0754,0048,0752,0254,0947
-	CABLE	MOVIE TIME	0350
-	CABLE	NOWTV	1106
-	CABLE	NSC	0350
-	CABLE	OAK	0249,0550
-	CABLE	PACE	0854
-	CABLE	PANASONIC	0647,0452
-	CABLE	PARAGON	0250,0450
-	CABLE	PHILIPS	0748,0549,0150,0650,0750,0850
-	CABLE	PHILIPS-MAGNAVOX	0152,0055
-	CABLE	PIONEER	0449,0252,0950,0051

**Codes for SRU2103 and SRU2103S**

Check whether your remote control is type S or not.  
 If it is type "S", it is indicated on or near the product label,  
 located inside the battery compartment.  
 If there is no indication, your remote control is type "-".

-	CABLE	PULSAR	0250
-	CABLE	RADIO SHACK	0152,0055,0154
-	CABLE	RCA	0647,0748,0352
-	CABLE	RCN	0954
-	CABLE	REALISTIC	0548
-	CABLE	REGAL	0849
-	CABLE	REGENCY	0349
-	CABLE	REMBRANDT	0947
-	CABLE	ROGERS	0252
-	CABLE	RUNCO	0250
-	CABLE	SAMSUNG	0049,0051
-	CABLE	SCIENTIFIC ATLANTA	0451,0351,0252,0155,0852,0248,0251
-	CABLE	SHAW	0752
-	CABLE	SIGNAL	0049
-	CABLE	SIGNATURE	0947
-	CABLE	SL MARX	0049
-	CABLE	SPRUCER	0647
-	CABLE	STANDARD	0551
-	CABLE	STAR SIGHT	0352
-	CABLE	STAR TRAK	0253
-	CABLE	STARCOM	0747,0453
-	CABLE	STARGATE	0049
-	CABLE	TANDY	0651
-	CABLE	TELEVIEW	0049
-	CABLE	TEXSCAN	0551
-	CABLE	TIME WARNER	0252
-	CABLE	TOCOM	0048,0751,0952,0653
-	CABLE	TOSHIBA	0250
-	CABLE	TV86	0350
-	CABLE	UNIKA	0448,0548,0748
-	CABLE	UNITED CABLE	0747
-	CABLE	UNIVERSAL	0448,0548,0648,0748,0851,0054
-	CABLE	VIDEO TECH	0656
-	CABLE	VIDEOTRON	0252
-	CABLE	VIDEOWAY	0052
-	CABLE	VIEWSTAR	0149,0150,0350,0651
-	CABLE	VISIONETICS	1206
-	CABLE	ZENITH	0951,0154,0748,0250,0753,0853,0953
-	CABLE	ZENITH NETWORK	0354
-	CD	ADC	0490
-	CD	ADCOM	0767,0073
-	CD	AIWA	0967,0372,0885
-	CD	AKAI	0173,0375,0684
-	CD	AUDIO TECHNICA	0168
-	CD	CALIFORNIA AUDIO LABS	0273
-	CD	CAPETRONIC	0568
-	CD	CARVER	0268,0368,0468,0184
-	CD	CASIO	0379
-	CD	CENTRIOS	0979
-	CD	CITIZEN	0284
-	CD	CURTIS MATHES	0379
-	CD	DENON	0668
-	CD	EMERSON	0767,0968
-	CD	FISHER	0368,0169,0269,0369,0473
-	CD	GENEXXA	0968,0469,0573
-	CD	GOLDSTAR	0673
-	CD	HARMAN KARDON	0669,0770
-	CD	HITACHI	0469
-	CD	INKEL	0769
-	CD	INSIGNIA	0578
-	CD	JC PENNEY	0670,0379
-	CD	JVC	0869,0982
-	CD	KENWOOD	0569,0969,0170,0374,0474,0484
-	CD	KRELL	0268
-	CD	KYOCERA	0490
-	CD	LUXMAN	0270,0370,0574,0475
-	CD	LXI	0379
-	CD	MAGNAVOX	0268,0774,0681
-	CD	MARANTZ	0268,0470,0570,0874
-	CD	MCS	0670,0379
-	CD	MGA	0770
-	CD	MISSION	0268
-	CD	MINIBISHI	0770,0870
-	CD	NAD	0773,0975
-	CD	NAKAMICHI	0970,0071,0784
-	CD	NEC	0670
-	CD	NEXXTECH	0679,0879,0480,0580,0584,0087,0787
-	CD	NIKKO	0168,0968,0269
-	CD	NSM	0268
-	CD	ONKYO	0171,0271,0873,0782
-	CD	OPTIMUS	0368,0468,0469,0569,0371,0471,0571,0671,0076,0376,0776
-	CD	PANASONIC	0273,0974,0675,0683,0887
-	CD	PHILIPS	0268,0774,0184
-	CD	PIONEER	0469,0771,0871,0573,0676,0385,0289
-	CD	PROTON	0268
-	CD	QUASAR	0273
-	CD	RADIO SHACK	0468,0571,0272,0676,0280,0488,0089,0289
-	CD	RCA	0767,0368,0971,0973,0676,0181,0086,0988,0089,0289
-	CD	REALISTIC	0767,0368,0568,0968,0469,0570,0371,0571
-	CD	ROTEL	0268
-	CD	SAE	0268
-	CD	SAMSUNG	0775
-	CD	SANSUI	0268,0072,0973,0075
-	CD	SANYO	0368,0172,0473,0175,0875
-	CD	SCOTT	0767,0968

-	CD	SEARS	0569,0570,0379
-	CD	SHARP	0569,0570
-	CD	SHERWOOD	0769,0570,0471,0272,0587
-	CD	SHURE	0670
-	CD	SONY	0372,0880,0081,0681
-	CD	STS	0490
-	CD	SYLVANIA	0268
-	CD	SYMPHONIC	0572
-	CD	TEAC	0269,0570,0571,0572,0672,0772,0287
-	CD	TECHNICS	0273,0974,0683,0887
-	CD	THETA DIGITAL	0774
-	CD	TOSHIBA	0773
-	CD	VICTOR	0869
-	CD	YAMAHA	0168,0872,0972,0074,0286
-	CD	ZENITH	0269,0674,0577,0080,0686
-	DVD	A-TREND	0940
-	DVD	ACESONIC	1513
-	DVD	ADVENT	0893
-	DVD	AFREEY	0343
-	DVD	AIWA	0043
-	DVD	AKAI	0141,0145,1112,1912
-	DVD	ALLEGRO	0126,0142
-	DVD	AMES	0744
-	DVD	AMW	0393,0493
-	DVD	ANABA	0797
-	DVD	APEX	0240,0640,0740,0840,0044,0644,0245,0545,0146,0347,0547,0495,0992,0741,0596
-	DVD	ASPIRE	0994
-	DVD	ASTAR	1910
-	DVD	AUDIOVOX	0793,1313
-	DVD	AXION	0793
-	DVD	B & K	0499
-	DVD	BLAUPUNKT	0644
-	DVD	BLUESKY	0143,0146,1114
-	DVD	BODYSONIC	0343
-	DVD	BOSE	0868
-	DVD	BOSS	0792
-	DVD	BOSTON ACOUSTIC	1411
-	DVD	BRITANIA	0833
-	DVD	BROKSONIC	0894,0398,0041
-	DVD	CAVS	1113
-	DVD	CENTRIOS	0796,1308,1408,0793,1007,1107,1507,1607,1707,1008,1108,1807,0546
-	DVD	CHANGHONG	0741
-	DVD	CINEVISION	0142
-	DVD	CITECH	1908
-	DVD	CITIZEN	1908
-	DVD	CLASSIC	0744,1706,0741
-	DVD	COBY	0294,0296,0396,0293,0146,0494,0091,1710,1711,1712,1812,1014
-	DVD	CONCEPT	0644
-	DVD	CONIA	0146
-	DVD	CRITERION	0446
-	DVD	CURTIS INTERNATIONAL	0594,0494
-	DVD	CYBERHOME	0940,0100,0595
-	DVD	CYBERVISION	0433
-	DVD	CYTRON	0246,0440
-	DVD	DAEWOO	0645,0745,0046,0798,0198
-	DVD	DENON	0641,0743
-	DVD	DENZEL	0444
-	DVD	DESAY	0497
-	DVD	DIAMOND VISION	0496,0890,0291
-	DVD	DIGITREX	0146
-	DVD	DIGIX	0095
-	DVD	DISNEY	0447
-	DVD	DRIVE	1011
-	DVD	DUAL	0346,0000,0297,0444,0246,1810
-	DVD	DURABRAND	0546,0142,0246,1210,1310,1410,1510,1610
-	DVD	DVD 2000	0841
-	DVD	EIGERVISION	1213
-	DVD	ELTA	0045,0145
-	DVD	EMERSON	0142,0695,0591,0247,0447
-	DVD	ESA	0297
-	DVD	FARENHEIT	0697
-	DVD	FISHER	0243
-	DVD	FUNAI	0247,0447,0591
-	DVD	GE	0542,0644
-	DVD	GO-VIDEO	0744,0395,0798,0047,0891,0791,0342,0244,0147
-	DVD	GOLDSTAR	0142
-	DVD	GPX	0295,0096
-	DVD	GRADIENTE	0143,0633,0733
-	DVD	GREENHILL	0644
-	DVD	HAAZ	0746,0846
-	DVD	HAIER	0195
-	DVD	HARMAN KARDON	0344
-	DVD	HITACHI	0042,0342,0444,0543,0340
-	DVD	HITEKER	0146
-	DVD	HUMAX	0892
-	DVD	ILO	0597,1608
-	DVD	INFINITY	0343
-	DVD	INITIAL	0644,1608,1110,1512
-	DVD	INSIGNIA	0142,0247,0793,0644,0192,0392
-	DVD	INTEGRA	0843
-	DVD	JBL	0344
-	DVD	JVC	0441,0242,0442,0098,0691,1808,0443,0993
-	DVD	JWIN	0640,0990,0191,1412
-	DVD	KAWASAKI	0196,0546
-	DVD	KENWOOD	0641,0544

-	DVD	KISS	0444
-	DVD	KLH	0644,0292,0240
-	DVD	KONKA	0642,0742,0842,0942,0192
-	DVD	KOSS	0143,0440
-	DVD	KXD	0091
-	DVD	LASONIC	0746,0496
-	DVD	LENOXX	0794,0145,1310,1410
-	DVD	LG	0142,0898,0392
-	DVD	LINN	0945
-	DVD	LIQUIDVIDEO	0793
-	DVD	LITEON	0899,0891,0491,0597,1508
-	DVD	MAGNAVOX	0441,0442,0447,0599,0799,0699,0247,0193,0093,0598
-	DVD	MARANTZ	0441,0142,0442,0943,0799
-	DVD	MAXENT	0993,0991
-	DVD	MEDION	0792,0246,0991,0291,0597
-	DVD	MEMOREX	0246,1606,1413,1913
-	DVD	MERIDIAN	0441
-	DVD	MICROSOFT	0542
-	DVD	MICROVISION	0792
-	DVD	MINTEK	0644
-	DVD	MITSUBISHI	0841
-	DVD	MUSTEK	0744
-	DVD	MYRON & DAVIS	0897
-	DVD	NAD	0142,0944
-	DVD	NAKAMICHI	0844
-	DVD	NEC	0142
-	DVD	NESA	0644,0897
-	DVD	NEXXTECH	0896,0097,0197,0297,0095,1806,1007,1107,1207,1307,1907,1008,0546,0596
-	DVD	NORCENT	0294,0899,0394,0194,0494
-	DVD	ONKYO	0441,0843,0199
-	DVD	OPTIMUS	0042,0941
-	DVD	ORION	0041
-	DVD	ORITRON	0143,1607
-	DVD	PACIFIC	0246
-	DVD	PANASONIC	0241,0641,0099,0698,0345,0696,0340
-	DVD	PHILCO	0533
-	DVD	PHILIPS	0441,0442,0943,0177,0599,0799,0699,0247,0447,0598,1211,1214
-	DVD	PHILIPS-MAGNAVOX	0441,0442,0943,0599,0699
-	DVD	PIONEER	0941,0042,0299,0399,0498,0592,1010
-	DVD	PIVA	1109
-	DVD	POLAROID	0140,0397,0596,1813
-	DVD	POLK AUDIO	0441,0442,0799
-	DVD	PORTLAND	0145,0896
-	DVD	POWER ACOUSTIK	1312
-	DVD	PROLINE	0143
-	DVD	PROSCAN	0542,0690
-	DVD	PROSONIC	0294
-	DVD	PROTRON	0194
-	DVD	PYLE	0692
-	DVD	RADIO SHACK	0546,0946,0593,0693
-	DVD	RCA	0542,0143,0644,0546,0946,0693,0690,1913
-	DVD	REGENT	0794,1210
-	DVD	REOC	0746
-	DVD	RIO	0142
-	DVD	RJ TECHNOLOGY	1209,1311
-	DVD	ROSEN	0694
-	DVD	ROTEL	0242
-	DVD	SABA	0593
-	DVD	SAMPO	0343
-	DVD	SAMSUNG	0342,0047,0895,0997,0790,1511,0147
-	DVD	SANSUI	0041,0398
-	DVD	SANYO	0092,0546,0243
-	DVD	SEARS	0041,0247
-	DVD	SEG	0444
-	DVD	SELECTRON	1309,1409,1509,1609,1709,1809,1909
-	DVD	SEMP	0440
-	DVD	SHARP	0341,0391,0492
-	DVD	SHERWOOD	0144
-	DVD	SHINCO	0644
-	DVD	SHINSONIC	0644
-	DVD	SONIC BLUE	0395
-	DVD	SONY	0300,0400,0500,0541,0200,0540
-	DVD	SOUNDSTORM	0692,0792
-	DVD	SOVA	1111
-	DVD	SUNGALE	0996,0396
-	DVD	SUPERSCAN	0247
-	DVD	SUPERSONIC	0096
-	DVD	SV2000	0247
-	DVD	SVA	0146,0492
-	DVD	SYLVANIA	0247,0447,1212,0591
-	DVD	SYMPHONIC	0247,0447,0591
-	DVD	TASCAM	0242
-	DVD	TEAC	0042,0546,0142
-	DVD	TECHNICS	0641
-	DVD	TECHWOOD	0944,1708,0442
-	DVD	TERAPIN	0995
-	DVD	TEVION	0440,0246,0346,0446,0646,0746,0846
-	DVD	THETA DIGITAL	0042
-	DVD	TIVO	0892,0592
-	DVD	TOSHIBA	1612,1013,1613,0441,0998,0094,0999
-	DVD	TREDEX	0795
-	DVD	TRUTECH	1906,0798,1713
-	DVD	UNITED	0546
-	DVD	VENTURER	0546
-	DVD	WESTINGHOUSE	0300

-	DVD	WHARFEDALE	0845,0343
-	DVD	WHITE WESTINGHOUSE	0447
-	DVD	X-BOX	0542
-	DVD	XENIUS	0440
-	DVD	YAMAHA	0641,0643,0599,0699,0442
-	DVD	YAMAKAWA	0445,0444,1407
-	DVD	ZENITH	0441,0142,0392
-	DVD-RECORDERS + R APEX		0495
-	DVD-RECORDERS + R ASPIRE		0994
-	DVD-RECORDERS + R BROKSONIC		0398
-	DVD-RECORDERS + R CENTRIOS		0796,1607,1707
-	DVD-RECORDERS + R COBY		0091
-	DVD-RECORDERS + R CYBERHOME		0595
-	DVD-RECORDERS + R EMERSON		0591
-	DVD-RECORDERS + R GO-VIDEO		0744,0891,0791
-	DVD-RECORDERS + R HITACHI		0543,0340
-	DVD-RECORDERS + R HUMAX		0892
-	DVD-RECORDERS + R ILO		0597
-	DVD-RECORDERS + R INSIGNIA		0392
-	DVD-RECORDERS + R JVC		0691,1808
-	DVD-RECORDERS + R KXD		0091
-	DVD-RECORDERS + R LG		0392
-	DVD-RECORDERS + R LITEON		0891,0491,0597
-	DVD-RECORDERS + R MAGNAVOX		0599,0699
-	DVD-RECORDERS + R MEDION		0991,0597
-	DVD-RECORDERS + R MEMOREX		1606,1413
-	DVD-RECORDERS + R MUSTEK		0744
-	DVD-RECORDERS + R ORITRON		1607
-	DVD-RECORDERS + R PANASONIC		0340
-	DVD-RECORDERS + R PHILIPS		0599,0699,1211
-	DVD-RECORDERS + R PHILIPS-MAGNAVOX		0599,0699
-	DVD-RECORDERS + R PIONEER		0399,0592,1010
-	DVD-RECORDERS + R POLAROID		0140
-	DVD-RECORDERS + R RCA		0542
-	DVD-RECORDERS + R SAMSUNG		0790
-	DVD-RECORDERS + R SANYO		0092
-	DVD-RECORDERS + R SELECTRON		1609
-	DVD-RECORDERS + R SHARP		0391
-	DVD-RECORDERS + R SONY		0300,0400,0500
-	DVD-RECORDERS + R SYLVANIA		1212,0591
-	DVD-RECORDERS + R SYMPHONIC		0591
-	DVD-RECORDERS + R TOSHIBA		0998,0441,1013
-	DVD-RECORDERS + R TRUTECH		1906
-	DVD-RECORDERS + R YAMAHA		0599,0699
-	DVD-RECORDERS + R ZENITH		0392
-	DVR	AT&T	0938
-	DVR	HUGHES	0659
-	DVR	HUMAX	0892
-	DVR	PANASONIC	0938,0340
-	DVR	PHILIPS	0738,0036,0136
-	DVR	PIONEER	0592,0399
-	DVR	POLAROID	1813
-	DVR	RCA	0542
-	DVR	REPLAYTV	0938
-	DVR	SONIC BLUE	0938
-	DVR	SONY	0838,0367,0537,0300,0400,0500
-	DVR	TiVo	0738,0838,0036,0136,0367,0999,0892,0592
-	DVR	TOSHIBA	0999
-	DVR-CAB	CABLEVISION	0252
-	DVR-CAB	ILLICO	0252
-	DVR-CAB	PIONEER	0252
-	DVR-CAB	RCN	0954
-	DVR-CAB	ROGERS	0252
-	DVR-CAB	SCIENTIFIC ATLANTA	0252
-	DVR-CAB	TIME WARNER	0252
-	DVR-CAB	VIDEOTRON	0252
-	DVR-DVD	HUMAX	0892
-	DVR-DVD	ILO	0597
-	DVR-DVD	JVC	1808
-	DVR-DVD	LITEON	0597
-	DVR-DVD	MEDION	0597
-	DVR-DVD	PANASONIC	0340
-	DVR-DVD	PIONEER	0592,0399
-	DVR-DVD	POLAROID	1813
-	DVR-DVD	SONY	0300,0400,0500
-	DVR-DVD	TIVO	0892,0592
-	DVR-DVD	TOSHIBA	0999,0998,1013
-	DVR-SAT	BELL EXPRESSVU	0366,0167
-	DVR-SAT	DIRECTV	1506
-	DVR-SAT	DISH NETWORK	0167,0366
-	DVR-SAT	DREAMBOX	0663
-	DVR-SAT	ECHOSTAR	0167,0366
-	DVR-SAT	EXPRESSVU	0366,0167
-	DVR-SAT	FORTEC STAR	0558,0157,0257
-	DVR-SAT	HUGHES NETWORK	0763,0659
-	DVR-SAT	PHILIPS	0763
-	DVR-SAT	PROSCAN	0966
-	DVR-SAT	RCA	0966
-	DVR-SAT	SAMSUNG	0959
-	DVR-SAT	SONY	0367,0567
-	DVR-SAT	ULTIMATE TV	0966,0567
-	DVR-SAT	ZENITH	0267
-	HDTV	GO VIDEO	0662
-	HDTV	HITACHI	0864
-	HDTV	HUGHES	0362,0864,0765

-	HDTV	LG	0362,0864,0765
-	HDTV	MITSUBISHI	0864
-	HDTV	MOTOROLA	0463
-	HDTV	PHILIPS	0864
-	HDTV	PIONEER	0062
-	HDTV	PROSCAN	0265
-	HDTV	RCA	0467
-	HDTV	SAMSUNG	0959
-	HDTV	SONY	0963
-	HDTV	SYLVANIA	0759
-	HDTV	TOSHIBA	0362,0765
-	HDTV	ZENITH	0065
-	HOME AUTOMATION	GE HOME MINDER	0201
-	HOME AUTOMATION	HOME AUTOMATION	0401
-	HOME AUTOMATION	LUTRON	0390
-	HOME AUTOMATION	X-10 (NEC)	0501
-	LD	DENON	0132
-	LD	PIONEER	0132
-	LD	PROSCAN	0432
-	LD	RCA	0432
-	LD	SANYO	0824
-	LD	SONY	0933
-	LD	ZENITH	0824
-	SAT	AMPLICA	0159
-	SAT	BELL EXPRESSVU	0067,0366,0167,0464
-	SAT	CENTURY	0356
-	SAT	CHANNEL MASTER	0359,0459,0559
-	SAT	CHAPPARAL	0657,0757
-	SAT	CHEYENNE	0757
-	SAT	DIRECTV	0863,0864,0564,0564,0963,0259,0260,0263,0962,0664,0065,0265,0465,0765,0866,0966,0367,0567,0362,0563,15
-	SAT	DISH NETWORK	0464,0167,0366,0862,0067,0460,0560,0660
-	SAT	DISHPRO	0460,0560,0660,0067
-	SAT	DRAKE	0857,0059,0360
-	SAT	DX ANTENNA	0458,0859
-	SAT	ECHOSPHERE	0464
-	SAT	ECHOSTAR	0464,0167,0366,0862,0067,0460,0560,0660
-	SAT	EXPRESSVU	0067,0366,0167,0464
-	SAT	FORTEC STAR	0558,0157,0257,0357,0457,0557
-	SAT	FUJITSU	0760,0860
-	SAT	GE	0265,0566,0365,0863,0966,0666,0766,0866
-	SAT	GEMINI	0161
-	SAT	GENERAL INSTRUMENT (GI)	0364,0865,0965,0466,0665,0166,0058,0158,0258,0960
-	SAT	GLOBECAST	0956,1306
-	SAT	GO VIDEO	0662
-	SAT	HITACHI	0465,0564,0664,0864,0765,0362
-	SAT	HUGHES NETWORK	0864,0763,0765,0465,0564,0362,0659
-	SAT	JVC	0464,0862
-	SAT	KENWOOD	0461
-	SAT	LG	0362,0864,0765
-	SAT	LUXOR	0561
-	SAT	MACOM	0661
-	SAT	MAGNAVOX	0259,0862,0565
-	SAT	MITSUBISHI	0765,0864,0465,0564,0664,0362
-	SAT	MOTOROLA	0466,0463
-	SAT	NET	0456,0262
-	SAT	NORSTAT	0761
-	SAT	NOVAPLEX	0155
-	SAT	PACE	0063,0163,0266
-	SAT	PANASONIC	0264,0260,0261
-	SAT	PANSAT	0060,1406
-	SAT	PHILIPS	0259,0862,0763,0564,0664,0864,0465,0765,0565,0362,0162
-	SAT	PHILIPS-MAGNAVOX	0259,0862,0565
-	SAT	PIONEER	0062
-	SAT	PRIMESTAR	0364,0665
-	SAT	PROSAT	0957
-	SAT	PROSCAN	0265,0365,0666,0966,0766,0866
-	SAT	RCA	0265,0566,0365,0863,0467,0966,0666,0766,0866,0411
-	SAT	REALISTIC	0961,0358
-	SAT	SAMSUNG	0061,0959,0962,0263,0563,0655
-	SAT	SHARP	0062
-	SAT	SIERRA I, II, III	0757
-	SAT	SKY NETWORK	0063,0163,0266,0355,0455,0555
-	SAT	SONY	0963,0367,0567,0160,0861
-	SAT	STAR SIGHT	0964
-	SAT	STAR TRAK	0462
-	SAT	STARCHOICE	0665,0166,0364
-	SAT	STS	0458,0658,0758
-	SAT	SUPER GUIDE	0562
-	SAT	SYLVANIA	0759
-	SAT	TELSAT	0356
-	SAT	TOSHIBA	0765,0864,0465,0564,0664,0362,0858,0064,0164,0764
-	SAT	TVA	0756
-	SAT	ULTIMATE TV	0966,0567
-	SAT	UNIDEN	0964,0958,0762
-	SAT	UNITED	0361
-	SAT	VIDEO CIPHER II	0059
-	SAT	VISIONTEC	0856
-	SAT	WEB TV	0862,0160
-	SAT	ZENITH	0363,0065,0267,0161,0266,0857,0059,0360,0165
-	TV	ABEX	0120
-	TV	ADMIRAL	0603,0224,0701
-	TV	ADVENT	0213,0219,0893
-	TV	ADVENTURA	0019
-	TV	AIKO	0407
-	TV	AIWA	0121,0221,0324,0528

-	TV	AKAI	0112,0801,0309,1315,1415,0027,1112,1912,1515
-	TV	ALLERON	0706
-	TV	AMARK	0603
-	TV	AMTRON	0906
-	TV	ANAM NATIONAL	0906,0901,0104,0805,0920
-	TV	AOC	0002,0102,0502,1502,0003,0217,0119,0320
-	TV	APEX	0023,0223,0123,1814,0741
-	TV	ARCHER	0603
-	TV	ASPECT	0507
-	TV	AUDIOVOX	0906,1503,1313
-	TV	AXION	0319,0793
-	TV	BANG & OLUFSEN	0620
-	TV	BELCOR	0002
-	TV	BELL & HOWELL	0704,0506,0601,0701
-	TV	BENQ	0709,0909,0711,1616
-	TV	BLUESKY	1117,0016
-	TV	BRADFORD	0906
-	TV	BROKSONIC	0316,0115,0626,0327,0632,0041
-	TV	BROKWOOD	0002
-	TV	CANDLE	0002,0502,0019,0402
-	TV	CAPEHART	0119
-	TV	CCE	1916
-	TV	CELEBRITY	0801
-	TV	CELERA	0023
-	TV	CENTRIOS	0518
-	TV	CENTURION	0502
-	TV	CETRONIC	0805
-	TV	CHANGHONG	0023,0741
-	TV	CINERAL	0407,0016
-	TV	CITIZEN	0002,0502,0906,0112,0512,0520,0115,0701,0402,0805,0407
-	TV	CLAIRTONE	0003
-	TV	CLASSIC	0023,0741,0805
-	TV	CLP	0010
-	TV	CLP CLASSIC	0022,0005,0007
-	TV	COBY	1710,1014
-	TV	COLOR VOICE	0602
-	TV	COLORTYME	0002,0502,0602
-	TV	CONCERTO	0002,0502
-	TV	CONCIERGE	0713
-	TV	CONTEC	0906,0802,0003,0805
-	TV	CORNEA	0606
-	TV	CRAIG	0906,0805
-	TV	CROSLEY	0807
-	TV	CROWN	0906,0805
-	TV	CTX	0603
-	TV	CURTIS MATHES	0704,0112,0614,0002,0502,0601,0506,0512,0437,0701,0103
-	TV	CXC	0906,0805
-	TV	CYBERVISION	0016
-	TV	DAEWOO	0614,0002,0502,0611,0102,0415,0905,0615,0505,0826,0529,0046,0609,0805,0407,0303,0602,0214,0403,0314,05
-	TV	DAYTRON	0002,0502
-	TV	DELL	0522,0404,0814
-	TV	DIAMOND VISION	0622,0496,0810
-	TV	DIGIMATE	1303
-	TV	DIGISTAR	1503,0118,0413,0213,0318,0814,1603,1716,1816
-	TV	DIMENSIA	0704,0601
-	TV	DISNEY	0417,0115
-	TV	DUKANE	0507,0808
-	TV	DUMONT	0713,0002
-	TV	DURABRAND	0520,0115,0916,0126,0447,0323,0317,1115
-	TV	DYNASTY	0805
-	TV	ELECTROBAND	0801,0003
-	TV	ELECTROHOME	0002,0502,0027,0901,0803
-	TV	ELEKTRA	0701
-	TV	ELITE VIDEO	0321
-	TV	EMERSON	0002,0502,0006,0115,0506,0706,0520,0906,0316,0505,0614,0622,0324,0924,0626,0826,0027,0327,0128,0228,06
-	TV	ENVISION	0002,0502,0009,1502
-	TV	ESA	0520
-	TV	FISHER	0506,0612,0428,0619,0802
-	TV	FUJITSU	0321,0706,1202
-	TV	FUNAI	0706,0520,0906,0324,0247,0805
-	TV	FUTURETEC	0906,0805
-	TV	GATEWAY	0206
-	TV	GE	0704,0312,0018,0002,0502,0006,0007,0601,0835,0901,0114,0103,0803,0806,0310
-	TV	GIBRALTER	0713,0002
-	TV	GOLDSTAR	0002,0502,0102,0324,0435,0802,0307,0609,0217
-	TV	GRADIENTE	1902,0002,0916,1617,1517
-	TV	GRUNDY	0706,0906
-	TV	GUESTVISION	0721
-	TV	GVISION	1102
-	TV	HAIER	0709,0223,0323,0317,1316
-	TV	HALLMARK	0002,0502
-	TV	HARVARD	0906
-	TV	HEWLETT PACKARD	1103,1002
-	TV	HISENSE	0908,0819,0223,1203
-	TV	HITACHI	0410,0507,0815,0607,0808,0002,0502,0710,1801,0701,0802,0707,0315,0515,0715,0519,0324
-	TV	HYUNDAI	1015
-	TV	ILO	0421,1608,1004,1903,0216,0520
-	TV	IMA	0906
-	TV	IN FOCUS	0601
-	TV	INFINITY	0807,0430
-	TV	INITIAL	1608,0216,1110,1512
-	TV	INSIGNIA	0911,0520,0323,0115,0914,0213,0318,1416,0247,0504
-	TV	INTEGRA	0719
-	TV	INTEQ	0713
-	TV	JANEIL	0019

-	TV	JBL	0807
-	TV	JC PENNEY	0704,0002,0102,0502,0112,0312,0512,0007,0601,0310,0402,0802,0103,0803,0604,0806
-	TV	JCB	0801
-	TV	JENSEN	0002,0502,0914
-	TV	JVC	0607,0204,0321,0508,0617,0326,0993,0802,0108,0308,0715
-	TV	KAWASHO	0002,0502,0801
-	TV	KAYPANI	0119
-	TV	KEC	0805,0906
-	TV	KENWOOD	0002,0502
-	TV	KLH	0023
-	TV	KLOSS NOVABEAM	0408,0019
-	TV	KOGI	1102
-	TV	KONKA	0906,0702,0203,0306,0208,0911,0842,0942,0504
-	TV	KTV	0906,0003,0703,0805,0608
-	TV	KURAZAI	0701
-	TV	LASONIC	0622,0496
-	TV	LEGEND	0213
-	TV	LG	0002,0606,0502,0102,0117,0814,0324,0435,0802,0307,0609,0217
-	TV	LIQUIDVIDEO	0319,0418,0793
-	TV	LODGENET	0704,0821,0601,0701
-	TV	LOEWE	0722,0807
-	TV	LOGIK	0704,0601,0701
-	TV	LUCE	0107
-	TV	LUXMAN	0002,0502
-	TV	LXI	0704,0002,0502,0506,0807,0312,0512,0601,0324,0103
-	TV	MAGNASONIC	0706
-	TV	MAGNAVOX	0807,0002,0502,0919,1914,0224,0430,0247,0402,0408,0109,0715
-	TV	MAJESTIC	0704,0601,0701
-	TV	MARANTZ	0807,0719,0002,0502
-	TV	MAXENT	0206
-	TV	MEDION	0922,0421,0417
-	TV	MEGATRON	0002,0502,0507
-	TV	MEI	0003
-	TV	MEMOREX	0002,0502,0506,0706,0115,0704,0601,1302,0428,0632,0701
-	TV	MGA	0002,0102,0502,0706,0802,0803,0715,0619
-	TV	MIDLAND	0704,0713,0007,0312,0103
-	TV	MINTEK	0216
-	TV	MINUTZ	0806
-	TV	MITSUBISHI	0102,0716,0706,0002,0502,0027,0803,0715,0619
-	TV	MONIVISION	0205
-	TV	MONTGOMERY WARD	0704,0701,0601
-	TV	MOTEVA	0506,1902
-	TV	MOTOROLA	0603,0901
-	TV	MTC	0002,0102,0502,0112,0512,0003
-	TV	MULTITECH	0906
-	TV	MULTIVISION	0010
-	TV	MYRON & DAVIS	0822
-	TV	NAD	0002,0502,0512,0120
-	TV	NEC	0719,0002,0102,0502,0901,0602,0111,0715
-	TV	NET TV	0206,0014
-	TV	NEXXTECH	1806,0318
-	TV	NIKEI	0805
-	TV	NIKKO	0002,0502,0407
-	TV	NIKO	1915
-	TV	NORCENT	0223,0905,0207
-	TV	NTC	0407
-	TV	OLEVIA	1304,1802,1615,1815,1217
-	TV	ONCOMMAND	0721
-	TV	ONKING	0805
-	TV	ONWA	0906,0805
-	TV	OPTIMUS	0618,0120,0039,0739
-	TV	OPTOMA	1404
-	TV	OPTONICA	0603,0111
-	TV	ORION	0713,0115,0105
-	TV	PANASONIC	0718,0416,0007,0618,0807,0039,0739,0345,0696,0901,0608
-	TV	PHILCO	0807,0002,0102,0502,0919,0702,1417,0408,0109,0715,0901,0402
-	TV	PHILIPS	0807,0022,0020,0422,0122,0222,0322,0002,0520,0919,0521,0621,0709,1516,1017,0430,0247,0901,0402,0408,01
-	TV	PHILIPS-MAGNAVOX	0807,0022,0322,0919,0224,0430
-	TV	PILOT	0002
-	TV	PIONEER	0120,0719,0808,0002,0502,0610,0519
-	TV	PIVA	1109
-	TV	PLANAR	1302
-	TV	POLAROID	0819,0918,0914,1503,1215,0504
-	TV	PORTLAND	0002,0102,0502,0415,0614
-	TV	PRECISION	0218
-	TV	PRICE CLUB	0112
-	TV	PRIMA	1503,0118,0213,0318,0219
-	TV	PRINCETON GRAPHICS	0603,0511
-	TV	PRISM	0007
-	TV	PROSCAN	0704,0312,0103,0601,0817,0917
-	TV	PROTON	0820,0002,0502,1602,0910,0119,0220
-	TV	PROTRON	1303,1317
-	TV	PROVIEW	1104,1204,1304
-	TV	PULSAR	0713,0002
-	TV	QUASAR	0718,0416,0007,0618,0807,0039,0739,0901,0608
-	TV	RADIO SHACK	0704,0002,0406,0506,0906,0618,0502,0324,0835,0601,0802,0705,0805,0111
-	TV	RCA	0704,0002,0406,0007,0011,0611,0811,0312,0514,0720,0102,0502,0601,0817,0917,0835,0901,0103,0803,0211,09
-	TV	REALISTIC	0704,0002,0406,0506,0906,0618,0502,0601,0324,0802,0705,0805,0111
-	TV	RHAPSODY	0003
-	TV	RUNCO	0713,0719,0712
-	TV	SAMPO	0014,0206,0002,0502,0119,0802
-	TV	SAMSUNG	0112,0309,0209,0512,0302,0502,0002,0102,0110,0818,0895,0437,0802,0103,0609,0012,0212
-	TV	SAMSUX	0502
-	TV	SAMTRON	0112
-	TV	SANSUI	0115,0632



-	TV	SANTECA	0021
-	TV	SANYO	0506,0311,0612,0002,0428,0802,0412,0619
-	TV	SCEPTRE	0516,1814
-	TV	SCOTCH	0002,0502
-	TV	SCOTT	0002,0502,0706,0906,0004,0105,0805
-	TV	SEARS	0704,0807,0506,0706,0112,0002,0502,0312,0512,0612,0520,0601,0812,0509,0041,0247,0802,0103,0619
-	TV	SELETRON	1803,1603,1703
-	TV	SEMP	1701
-	TV	SHARP	0509,0913,0907,0603,0002,0502,0224,0228,0202,0111,0813
-	TV	SHOGUN	0002
-	TV	SIGNATURE	0704,0601,0701,0903
-	TV	SIMPSON	0402
-	TV	SONIC	0003
-	TV	SONY	0414,0902,0801,0708,0639,0816
-	TV	SOUNDESIGN	0002,0502,0706,0906,0402,0805
-	TV	SOVA	1901,1111
-	TV	SOYO	1614,1714
-	TV	SPECTRA	0622
-	TV	SPECTRAVISION	0921
-	TV	SQUAREVIEW	0520
-	TV	SSS	0002,0906,0805
-	TV	STAR SIGHT	0008
-	TV	STARLITE	0906
-	TV	SUPERSCAN	0812,0509,0247
-	TV	SUPERSONIC	0096
-	TV	SUPRA	0002,0809
-	TV	SUPREMACY	0019
-	TV	SUPREME	0801
-	TV	SVA	0223,0822
-	TV	SYLVANIA	0807,0002,0502,0115,0520,0919,1715,0324,0247,0447,0402,0408,0109,0715,0717
-	TV	SYMPHONIC	0906,0520,0324,0247,0004
-	TV	SYNTAX	1304,1615,1815
-	TV	TANDY	0603
-	TV	TATUNG	0709,0421,0901
-	TV	TECHNICS	0007
-	TV	TECHWOOD	0002,0502,0007
-	TV	TEKNIKA	0704,0002,0102,0502,0706,0906,0112,0512,0618,0601,0019,0701,0402,0802,0805
-	TV	TELECATION	0313
-	TV	TELERENT	0704,0601,0701
-	TV	TERA	0002,0220
-	TV	TEVION	0421
-	TV	TMK	0002,0502
-	TV	TOSHIBA	0517,0419,0512,0613,0719,0112,0506,0111,0618,0627,0437,0041,0094,0802,0111,0313,0715
-	TV	TRUTECH	1504,1116,1713
-	TV	UNIVERSAL	0806,0310
-	TV	VICTOR	0607
-	TV	VIDTECH	0002,0102,0502
-	TV	VIEWSONIC	0206,0808,1003,1016
-	TV	VIKING	0019
-	TV	VIORE	1403
-	TV	VIZIO	0709,1702
-	TV	WARDS	0704,0807,0002,0102,0502,0706,0601,0408,0109,0310,0111,0513,0806,0701,0402,0004
-	TV	WESTINGHOUSE	0915,0013,1216,0300
-	TV	WHITE WESTINGHOUSE	0611,0614,0415,0215,1402,0324,0529,0609
-	TV	YAMAHA	0618,0002,0102,0502
-	TV	ZENITH	0713,0502,0606,0409,0710,0415,0507,0714,0405,0712,0015,0916,0008,0002,0115,0224,0324,0126,0326,0826,02
-	VCR	ACCELE	0037
-	VCR	ADMIRAL	0224
-	VCR	ADVENTURA	0726
-	VCR	AIKO	0826
-	VCR	AIWA	0126,0324,0528,0726
-	VCR	AKAI	0324,0524,0424,0624,0724,0027,0931,0335
-	VCR	ALLEGRO	0326,0534,0925
-	VCR	AMERICAN HIGH	0830
-	VCR	APEX	0596
-	VCR	ASHA	0037
-	VCR	AT&T	0938
-	VCR	AUDIO DYNAMICS	0239,0339,0025
-	VCR	AUDIOVOX	0126
-	VCR	BEAUMARK	0037
-	VCR	BELL & HOWELL	0428
-	VCR	BROKSONIC	0227,0626,0327,0632,0041,0398,0325,0530
-	VCR	CALIX	0126
-	VCR	CANDLE	0625,0126,0037,0025,0825,0026
-	VCR	CANNON	0124,0830,0535
-	VCR	CAPEHART	0534
-	VCR	CARVER	0330
-	VCR	CCE	0826,0237
-	VCR	CINEVISION	0126
-	VCR	CITIZEN	0625,0126,0826,0037,0025,0825,0026
-	VCR	COLORTYME	0025
-	VCR	COLT	0237
-	VCR	CRAIG	0126,0037,0237,0426
-	VCR	CURTIS MATHES	0124,0330,0324,0035,0037,0437,0025,0526,0830
-	VCR	CYBERNEX	0037
-	VCR	DAEWOO	0529,0625,0626,0826,0035,0825,0026,0726,0798
-	VCR	DBX	0239,0339,0025
-	VCR	DENON	0132
-	VCR	DIAMOND VISION	0291
-	VCR	DIMENSIA	0124
-	VCR	DURABRAND	0126
-	VCR	DYNATECH	0324,0726
-	VCR	ELECTROHOME	0126,0027
-	VCR	ELECTROPHONIC	0126
-	VCR	EMERSON	0626,0126,0826,0227,0327,0630,0632,0134,0037,0625,0924,0324,0128,0228,0428,0528,0447,0247,0724,0325,05

-	VCR	FISHER	0032,0428,0328,0330,0025,0426,0928,0029
-	VCR	FUJI	0524,0830
-	VCR	FUNAI	0324,0247,0447,0726
-	VCR	GARRARD	0726
-	VCR	GE	0124,0732,0135,0835,0037,0429,0830
-	VCR	GO-VIDEO	0037,0139,0342,0244,0147,0798,0438
-	VCR	GOLDSTAR	0324,0126,0435,0534,0236,0025
-	VCR	GRADIENTE	0726,0126
-	VCR	HARLEY DAVIDSON	0726
-	VCR	HARMAN KARDON	0025,0027
-	VCR	HARWOOD	0237
-	VCR	HEADQUARTER	0428
-	VCR	HI-Q	0426
-	VCR	HITACHI	0538,0324,0336,0931,0834
-	VCR	INFINITY	0430
-	VCR	INSIGNIA	0126,0392
-	VCR	INSTANT REPLAY	0324,0830
-	VCR	INTEQ	0126
-	VCR	JC PENNEY	0124,0126,0428,0037,0538,0239,0339,0830,0931,0834,0935,0025
-	VCR	JCL	0830
-	VCR	JENSEN	0538,0931
-	VCR	JVC	0239,0339,0428,0326,0443,0691,0025,0931
-	VCR	KENWOOD	0428,0239,0339,0025,0931
-	VCR	KLH	0237
-	VCR	KODAK	0126,0830
-	VCR	LG	0324,0534,0435,0392
-	VCR	LITEON	1508
-	VCR	LLOYD	0324,0726
-	VCR	LOGIK	0237
-	VCR	LXI	0324,0126
-	VCR	MAGNAVOX	0330,0430,0534,0324,0224,0124,0230,0125,0247,0093,0598,0830
-	VCR	MAGNIN	0037
-	VCR	MARANTZ	0330,0428,0239,0339,0530,0830,0535,0025
-	VCR	MARTA	0126
-	VCR	MATSUSHITA	0830
-	VCR	MEDION	0291
-	VCR	MEI	0830
-	VCR	MEMOREX	0330,0126,0428,0032,0632,0534,0037,0224,0324,0335,0426,0726,0830
-	VCR	MGA	0630,0027
-	VCR	MGN TECHNOLOGY	0037
-	VCR	MIDLAND	0429
-	VCR	MINOLTA	0538,0834
-	VCR	MINOLTA	0630,0431,0538,0239,0339,0131,0027
-	VCR	MITSUBISHI	0224,0631
-	VCR	MONTGOMERY WARD	0224,0830
-	VCR	MOTOROLA	0324,0037,0726
-	VCR	MTC	0324,0037,0726,0429,0237
-	VCR	MULTITECH	0428,0239,0339,0530,0731,0831,0931,0025,0526
-	VCR	NEC	0334,0546,0596
-	VCR	NEXXTECH	0126
-	VCR	NIKKO	0037
-	VCR	NOBLEX	0830
-	VCR	OLYMPUS	0525,0037,0937,0126,0737,0039,0739,0224
-	VCR	OPTIMUS	0037,0631
-	VCR	OPTONICA	0227,0632
-	VCR	ORION	0937,0739,0039,0938,0124,0345,0830
-	VCR	PANASONIC	0538,0025,0834
-	VCR	PENTAX	0330,0124,0125,0830
-	VCR	PHILCO	0330,0430,0036,0136,0738,0439,0939,0247,0230,0830
-	VCR	PHILIPS	0330,0430,0224
-	VCR	PHILIPS-MAGNAVOX	0126
-	VCR	PILOT	0132,0538,0239,0339,1010,0935
-	VCR	PIONEER	0596
-	VCR	POLAROID	0825,0026
-	VCR	PORTLAND	0124,0432
-	VCR	PROSCAN	0237
-	VCR	PROTEC	0534
-	VCR	PULSAR	0428
-	VCR	QUARTER	0428
-	VCR	QUARTZ	0937,0039,0124,0739,0830
-	VCR	QUASAR	0124,0224,0324,0525,0126,0428,0835,0037,0737,0937,0426,0726,0027,0029,0830,0631,0335
-	VCR	RADIO SHACK	0126
-	VCR	RADIX	0126
-	VCR	RANDEX	0124,0126,0432,0532,0732,0832,0932,0033,0133,0233,0135,0835,0037,0538,0424,0429,0830,0834
-	VCR	RCA	0124,0224,0324,0126,0428,0037,0737,0937,0426,0726,0027,0029,0830,0631,0335
-	VCR	REALISTIC	0938
-	VCR	REPLAYTV	0936
-	VCR	RICOH	0126,0142
-	VCR	RIO	0534
-	VCR	RUNCO	0037,0437,0625,0538,0147,0895,0997,0624,0335
-	VCR	SAMSUNG	0139
-	VCR	SAMTRON	0224,0534
-	VCR	SANKY	0632,0239,0339,0041,0227,0398,0931
-	VCR	SANSUI	0824,0032,0328,0428,0037,0426
-	VCR	SANYO	0625,0626,0327,0630,0735,0325,0927
-	VCR	SCOTT	0937,0126,0428,0330,0538,0041,0247,0426,0928,0029,0830,0834,0935
-	VCR	SEARS	0637,0737,0224,0324,0228,0825,0027,0631
-	VCR	SHARP	0524,0936,0538,0237,0337
-	VCR	SHINTOM	0037
-	VCR	SHOGUN	0324
-	VCR	SIGNATURE	0830,0237
-	VCR	SINGER	0938
-	VCR	SINGER	0539,0034,0524,0933,0936,0540,0838,0038,0138,0238,0639
-	VCR	SONIC BLUE	0538,0830,0834
-	VCR	SONY	0247
-	VCR	STS	
-	VCR	SUPERSCAN	

-	VCR	SYLVANIA	0324,0330,0630,0124,0247,0726,0830,0225,0447,1212
-	VCR	SYMPHONIC	0324,0225,0247,0726
-	VCR	TANDY	0324,0428
-	VCR	TASHIKO	0126
-	VCR	TATUNG	0931
-	VCR	TEAC	0324,0726,0931
-	VCR	TECHNICS	0830
-	VCR	TECHWOOD	1708
-	VCR	TEKNIKA	0324,0126,0134,0726,0830
-	VCR	TiVo	0738,0838
-	VCR	TMK	0037,0526,0731
-	VCR	TOSHIBA	0625,0727,0627,0330,0630,0437,0538,0094,0441,0029,0735
-	VCR	TOTEVISION	0126,0037
-	VCR	TRUTECH	0798
-	VCR	UNITECH	0037
-	VCR	VECTOR RESEARCH	0625,0239,0339,0025
-	VCR	VICTOR	0239,0339
-	VCR	VIDEO CONCEPTS	0625,0239,0339,0025,0027
-	VCR	VIDEOSONIC	0037
-	VCR	WARDS	0124,0224,0324,0625,0126,0037,0538,0426,0726,0027,0830,0631,0234,0834,0735,0237
-	VCR	WHITE WESTINGHOUSE	0324,0529
-	VCR	XR-1000	0726,0830,0237
-	VCR	YAMAHA	0025,0931,0239,0339
-	VCR	ZENITH	0534,0326,0826,0228,0430,0224,0324,0435,0336,0936,0437,0126,0524,0632,0824,0239,0339,0529,0438,0925
S	AUDIO	AIWA	0585,0885,0786,0687
S	AUDIO	APEX	0245
S	AUDIO	APPLE IPOD	0190
S	AUDIO	BOSE	0868,0079,0179
S	AUDIO	CARVER	0184
S	AUDIO	CENTRIOS	1107,0087
S	AUDIO	CITIZEN	0284
S	AUDIO	CRITERION	0446
S	AUDIO	DELPHI	0472
S	AUDIO	DENON	0981,0383,0886
S	AUDIO	FISHER	0083,0783
S	AUDIO	GOLDSTAR	0278
S	AUDIO	HARMAN KARDON	0082,0483
S	AUDIO	IPOD	0090
S	AUDIO	JVC	0680,0982,0583
S	AUDIO	KENWOOD	0969,0482,0283,0484,0884,0588
S	AUDIO	KOSS	0143
S	AUDIO	MAGNAVOX	0281,0083,0193,0277
S	AUDIO	MARANTZ	0470,0084
S	AUDIO	mitsubishi	0389
S	AUDIO	NAD	0773,0575,0975
S	AUDIO	NEO	0174
S	AUDIO	NEXXTECH	1107,0679,0879,0480,0580,0584,0087,0787
S	AUDIO	NORCENT	0494
S	AUDIO	ONKYO	0182,0782,0882,0199
S	AUDIO	OPTIMUS	0368,0376,0476,0576,0776,0876,0077,0980
S	AUDIO	PANASONIC	0780,0682,0183,0983,0987,0088,0099,0696
S	AUDIO	PHILIPS	0177,0083,0983,0084,0184,0277,0377
S	AUDIO	PIONEER	0385,0288,0388,0489,0299
S	AUDIO	RADIO SHACK	0272,0077,0980,0282,0188,0288,0388,0488,0189,0489,0589
S	AUDIO	RCA	0373,0274,0878,0779,0181,0384,0186,0288,0388,0688,0788,0888,0189,0489,0589,0546,0693
S	AUDIO	REALISTIC	0883
S	AUDIO	RIO	0142,0380
S	AUDIO	SABA	0593
S	AUDIO	SAMSUNG	0047
S	AUDIO	SANYO	0172
S	AUDIO	SCOTT	0478
S	AUDIO	SHARP	0768,0070,0582
S	AUDIO	SHERWOOD	0272,0282,0487,0587
S	AUDIO	SIRIUS	0276,0070
S	AUDIO	SKYFI	0174
S	AUDIO	SONY	0933,0479,0579,0180,0381,0481,0581,0984,0085,0185,0285,0985,0200
S	AUDIO	TAO	0174
S	AUDIO	TEAC	0672,0382,0187,0287,0387
S	AUDIO	TECHNICS	0780,0682,0183,0983,0987,0088
S	AUDIO	TEVION	0446
S	AUDIO	VENTURER	0176
S	AUDIO	XM RADIO	0472,0174
S	AUDIO	YAMAHA	0781,0881,0485,0685,0785,0286,0386,0486,0586,0378
S	AUDIO	ZENITH	0269,0674,0576,0577,0178,0278,0080,0083,0380,0686,0142
S	CABLE	ABC	0747,0947,0048,0148,0248
S	CABLE	ADELPHIA	0852,0752
S	CABLE	ALLEGRO	0054,0154
S	CABLE	AMERICAST	0354
S	CABLE	ANTRONIX	0448,0548
S	CABLE	ARCHER	0448,0548,0648,0748
S	CABLE	AT&T	0752
S	CABLE	BELL SOUTH	0354
S	CABLE	CABLETENNA	0448
S	CABLE	CABLEVIEW	0448
S	CABLE	CABLEVISION	0252
S	CABLE	CENTURY	0748
S	CABLE	CITIZEN	0748
S	CABLE	COGECO	0752
S	CABLE	COLOR VOICE	0848,0948
S	CABLE	COMCAST	0752
S	CABLE	COMTRONICS	0049,0149
S	CABLE	CONTEC	0249
S	CABLE	DIGITAL MUSIC EXPRESS	0053
S	CABLE	EASTERN	0349
S	CABLE	EVERQUEST	0049

S	CABLE	GARRARD	0748
S	CABLE	GC ELECTRONICS	0548
S	CABLE	GE	0556
S	CABLE	GEMINI	0255,0549
S	CABLE	GENERAL INSTRUMENT (GI)	0552,0747,0148,0752,0952,0453,0654,0754,0053,0048,0947
S	CABLE	HAMLIN	0747,0649,0749,0849
S	CABLE	HITACHI	0947
S	CABLE	ILLICO	0252
S	CABLE	JASCO	0748
S	CABLE	JERROLD	0552,0747,0148,0453,0947,0048,0653,0254
S	CABLE	MAGNAVOX	0150
S	CABLE	MEMOREX	0250
S	CABLE	MOTOROLA	0552,0148,0952,0453,0654,0754,0048,0752,0254,0947
S	CABLE	MOVIE TIME	0350
S	CABLE	NOWTV	1106
S	CABLE	NSC	0350
S	CABLE	OAK	0249,0550
S	CABLE	PACE	0854
S	CABLE	PANASONIC	0647,0452
S	CABLE	PARAGON	0250,0450
S	CABLE	PHILIPS	0748,0549,0150,0650,0750,0850
S	CABLE	PHILIPS-MAGNAVOX	0152,0055
S	CABLE	PIONEER	0449,0252,0950,0051
S	CABLE	PULSAR	0250
S	CABLE	RADIO SHACK	0152,0055,0154
S	CABLE	RCA	0647,0748,0352
S	CABLE	RCN	0954
S	CABLE	REALISTIC	0548
S	CABLE	REGAL	0849
S	CABLE	REGENCY	0349
S	CABLE	REMBRANDT	0947
S	CABLE	ROGERS	0252
S	CABLE	RUNCO	0250
S	CABLE	SAMSUNG	0049,0051
S	CABLE	SCIENTIFIC ATLANTA	0451,0351,0252,0155,0852,0248,0251
S	CABLE	SHAW	0752
S	CABLE	SIGNAL	0049
S	CABLE	SIGNATURE	0947
S	CABLE	SL MARX	0049
S	CABLE	SPRUCER	0647
S	CABLE	STANDARD	0551
S	CABLE	STAR SIGHT	0352
S	CABLE	STAR TRAK	0253
S	CABLE	STARCOM	0747,0453
S	CABLE	STARGATE	0049
S	CABLE	TANDY	0651
S	CABLE	TELEVIEW	0049
S	CABLE	TEXSCAN	0551
S	CABLE	TIME WARNER	0252
S	CABLE	TOCOM	0048,0751,0952,0653
S	CABLE	TOSHIBA	0250
S	CABLE	TV86	0350
S	CABLE	UNIKA	0448,0548,0748
S	CABLE	UNITED CABLE	0747
S	CABLE	UNIVERSAL	0448,0548,0648,0748,0851,0054
S	CABLE	VIDEO TECH	0656
S	CABLE	VIDEOTRON	0252
S	CABLE	VIDEOWAY	0052
S	CABLE	VIEWSTAR	0149,0150,0350,0651
S	CABLE	VISIONETICS	1206
S	CABLE	ZENITH	0951,0154,0748,0250,0753,0853,0953
S	CABLE	ZENITH NETWORK	0354
S	CD	ADC	0490
S	CD	ADCOM	0767,0073
S	CD	AIWA	0967,0372,0885
S	CD	AKAI	0173,0375,0684
S	CD	AUDIO TECHNICA	0168
S	CD	CALIFORNIA AUDIO LABS	0273
S	CD	CAPETRONIC	0568
S	CD	CARVER	0268,0368,0468,0184
S	CD	CASIO	0379
S	CD	CENTRIOS	0979
S	CD	CITIZEN	0284
S	CD	CURTIS MATHES	0379
S	CD	DENON	0668
S	CD	EMERSON	0767,0968
S	CD	FISHER	0368,0169,0269,0369,0473
S	CD	GENEXXA	0968,0469,0573
S	CD	GOLDSTAR	0673
S	CD	HARMAN KARDON	0669,0770
S	CD	HITACHI	0469
S	CD	INKEL	0769
S	CD	INSIGNIA	0578
S	CD	JC PENNEY	0670,0379
S	CD	JVC	0869,0982
S	CD	KENWOOD	0569,0969,0170,0374,0474,0484
S	CD	KRELL	0268
S	CD	KYOCERA	0490
S	CD	LUXMAN	0270,0370,0574,0475
S	CD	LXI	0379
S	CD	MAGNAVOX	0268,0774,0681
S	CD	MARANTZ	0268,0470,0570,0874
S	CD	MCS	0670,0379
S	CD	MGA	0770
S	CD	MISSION	0268

S	CD	mitsubishi	0770,0870
S	CD	NAD	0773,0975
S	CD	NAKAMICHI	0970,0071,0784
S	CD	NEC	0670
S	CD	NEXXTECH	0679,0879,0480,0580,0584,0087,0787
S	CD	NIKKO	0168,0968,0269
S	CD	NSM	0268
S	CD	ONKYO	0171,0271,0873,0782
S	CD	OPTIMUS	0368,0468,0469,0569,0371,0471,0571,0671,0076,0376,0776
S	CD	PANASONIC	0273,0974,0675,0683,0887
S	CD	PHILIPS	0268,0774,0184
S	CD	PIONEER	0469,0771,0871,0573,0676,0385,0289
S	CD	PROTON	0268
S	CD	QUASAR	0273
S	CD	RADIO SHACK	0468,0571,0272,0676,0280,0488,0089,0289
S	CD	RCA	0767,0368,0971,0973,0676,0181,0086,0988,0089,0289
S	CD	REALISTIC	0767,0368,0568,0968,0469,0570,0371,0571
S	CD	ROTEL	0268
S	CD	SAE	0268
S	CD	SAMSUNG	0775
S	CD	SANSUI	0268,0072,0973,0075
S	CD	SANYO	0368,0172,0473,0175,0875
S	CD	SCOTT	0767,0968
S	CD	SEARS	0569,0570,0379
S	CD	SHARP	0569,0570
S	CD	SHERWOOD	0769,0570,0471,0272,0587
S	CD	SHURE	0670
S	CD	SONY	0372,0880,0081,0681
S	CD	STS	0490
S	CD	SYLVANIA	0268
S	CD	SYMPHONIC	0572
S	CD	TEAC	0269,0570,0571,0572,0672,0772,0287
S	CD	TECHNICS	0273,0974,0683,0887
S	CD	THETA DIGITAL	0774
S	CD	TOSHIBA	0773
S	CD	VICTOR	0869
S	CD	YAMAHA	0168,0872,0972,0074,0286
S	CD	ZENITH	0269,0674,0577,0080,0686
S	DVD	A-TREND	0940
S	DVD	ACESONIC	1513
S	DVD	ADVENT	0893
S	DVD	AFREEY	0343
S	DVD	AIWA	0043
S	DVD	AKAI	0141,0145,1112,1912
S	DVD	ALLEGRO	0126,0142
S	DVD	AMES	0744
S	DVD	AMW	0393,0493
S	DVD	ANABA	0797
S	DVD	APEX	0240,0640,0740,0840,0044,0644,0245,0545,0146,0347,0547,0495,0992,0741,0596
S	DVD	ASPIRE	0994
S	DVD	ASTAR	1910
S	DVD	AUDIOVOX	0793,1313
S	DVD	AXION	0793
S	DVD	B & K	0499
S	DVD	BLAUPUNKT	0644
S	DVD	BLUESKY	0143,0146,1114
S	DVD	BODYSONIC	0343
S	DVD	BOSE	0868
S	DVD	BOSS	0792
S	DVD	BOSTON ACOUSTIC	1411
S	DVD	BRITANIA	0833
S	DVD	BROKSONIC	0894,0398,0041
S	DVD	CAVS	1113
S	DVD	CENTRIOS	0796,1308,1408,0793,1007,1107,1507,1607,1707,1008,1108,1807,0546
S	DVD	CHANGHONG	0741
S	DVD	CINEVISION	0142
S	DVD	CITECH	1908
S	DVD	CITIZEN	1908
S	DVD	CLASSIC	0744,1706,0741
S	DVD	COBY	0294,0296,0396,0293,0146,0494,0091,1710,1711,1712,1812,1014
S	DVD	CONCEPT	0644
S	DVD	CONIA	0146
S	DVD	CRITERION	0446
S	DVD	CURTIS INTERNATIONAL	0594,0494
S	DVD	CYBERHOME	0940,0100,0595
S	DVD	CYBERVISION	0433
S	DVD	CYTRON	0246,0440
S	DVD	DAEWOO	0645,0745,0046,0798,0198
S	DVD	DENON	0641,0743
S	DVD	DENZEL	0444
S	DVD	DESAY	0497
S	DVD	DIAMOND VISION	0496,0890,0291
S	DVD	DIGITREX	0146
S	DVD	DIGIX	0095
S	DVD	DISNEY	0447
S	DVD	DRIVE	1011
S	DVD	DUAL	0346,0000,0297,0444,0246,1810
S	DVD	DURABRAND	0546,0142,0246,1210,1310,1410,1510,1610
S	DVD	DVD 2000	0841
S	DVD	EIGERVISION	1213
S	DVD	ELTA	0045,0145
S	DVD	EMERSON	0142,0695,0591,0247,0447
S	DVD	ESA	0297
S	DVD	FARENHEIT	0697
S	DVD	FISHER	0243

S	DVD	FUNAI	0247,0447,0591
S	DVD	GE	0542,0644
S	DVD	GO-VIDEO	0744,0395,0798,0047,0891,0791,0342,0244,0147
S	DVD	GOLDSTAR	0142
S	DVD	GPX	0295,0096
S	DVD	GRADIENTE	0143,0633,0733
S	DVD	GREENHILL	0644
S	DVD	HAAZ	0746,0846
S	DVD	HAIER	0195
S	DVD	HARMAN KARDON	0344
S	DVD	HITACHI	0042,0342,0444,0543,0340
S	DVD	HITEKER	0146
S	DVD	HUMAX	0892
S	DVD	ILO	0597,1608
S	DVD	INFINITY	0343
S	DVD	INITIAL	0644,1608,1110,1512
S	DVD	INSIGNIA	0142,0247,0793,0644,0192,0392
S	DVD	INTEGRA	0843
S	DVD	JBL	0344
S	DVD	JVC	0441,0242,0442,0098,0691,1808,0443,0993
S	DVD	JWIN	0640,0990,0191,1412
S	DVD	KAWASAKI	0196,0546
S	DVD	KENWOOD	0641,0544
S	DVD	KISS	0444
S	DVD	KLH	0644,0292,0240
S	DVD	KONKA	0642,0742,0842,0942,0192
S	DVD	KOSS	0143,0440
S	DVD	KXD	0091
S	DVD	LASONIC	0746,0496
S	DVD	LENOXX	0794,0145,1310,1410
S	DVD	LG	0142,0898,0392
S	DVD	LINN	0945
S	DVD	LIQUIDVIDEO	0793
S	DVD	LITEON	0899,0891,0491,0597,1508
S	DVD	MAGNAVOX	0441,0442,0447,0599,0799,0699,0247,0193,0093,0598
S	DVD	MARANTZ	0441,0142,0442,0943,0799
S	DVD	MAXENT	0993,0991
S	DVD	MEDION	0792,0246,0991,0291,0597
S	DVD	MEMOREX	0246,1606,1413,1913
S	DVD	MERIDIAN	0441
S	DVD	MICROSOFT	0542
S	DVD	MICROVISION	0792
S	DVD	MINTEK	0644
S	DVD	MITSUBISHI	0841
S	DVD	MUSTEK	0744
S	DVD	MYRON & DAVIS	0897
S	DVD	NAD	0142,0944
S	DVD	NAKAMICHI	0844
S	DVD	NEC	0142
S	DVD	NESA	0644,0897
S	DVD	NEXXTECH	0896,0097,0197,0297,0095,1806,1007,1107,1207,1307,1907,1008,0546,0596
S	DVD	NORCENT	0294,0899,0394,0194,0494
S	DVD	ONKYO	0441,0843,0199
S	DVD	OPTIMUS	0042,0941
S	DVD	ORION	0041
S	DVD	ORITRON	0143,1607
S	DVD	PACIFIC	0246
S	DVD	PANASONIC	0241,0641,0099,0698,0345,0696,0340
S	DVD	PHILCO	0533
S	DVD	PHILIPS	0441,0442,0943,0177,0599,0799,0699,0247,0447,0598,1211,1214
S	DVD	PHILIPS-MAGNAVOX	0441,0442,0943,0599,0699
S	DVD	PIONEER	0941,0042,0299,0399,0498,0592,1010
S	DVD	PIVA	1109
S	DVD	POLAROID	0140,0397,0596,1813
S	DVD	POLK AUDIO	0441,0442,0799
S	DVD	PORTLAND	0145,0896
S	DVD	POWER ACOUSTIK	1312
S	DVD	PROLINE	0143
S	DVD	PROSCAN	0542,0690
S	DVD	PROSONIC	0294
S	DVD	PROTRON	0194
S	DVD	PYLE	0692
S	DVD	RADIO SHACK	0546,0946,0593,0693
S	DVD	RCA	0542,0143,0644,0546,0946,0693,0690,1913
S	DVD	REGENT	0794,1210
S	DVD	REOC	0746
S	DVD	RIO	0142
S	DVD	RJ TECHNOLOGY	1209,1311
S	DVD	ROSEN	0694
S	DVD	ROTEL	0242
S	DVD	SABA	0593
S	DVD	SAMPO	0343
S	DVD	SAMSUNG	0342,0047,0895,0997,0790,1511,0147
S	DVD	SANSUI	0041,0398
S	DVD	SANYO	0092,0546,0243
S	DVD	SEARS	0041,0247
S	DVD	SEG	0444
S	DVD	SELECTRON	1309,1409,1509,1609,1709,1809,1909
S	DVD	SEMP	0440
S	DVD	SHARP	0341,0391,0492
S	DVD	SHERWOOD	0144
S	DVD	SHINCO	0644
S	DVD	SHINSONIC	0644
S	DVD	SONIC BLUE	0395
S	DVD	SONY	0300,0400,0500,0541,0200,0540

S	DVD	SOUNDSTORM	0692,0792
S	DVD	SOVA	1111
S	DVD	SUNGALE	0996,0396
S	DVD	SUPERSCAN	0247
S	DVD	SUPERSONIC	0096
S	DVD	SV2000	0247
S	DVD	SVA	0146,0492
S	DVD	SYLVANIA	0247,0447,1212,0591
S	DVD	SYMPHONIC	0247,0447,0591
S	DVD	TASCAM	0242
S	DVD	TEAC	0042,0546,0142
S	DVD	TECHNICS	0641
S	DVD	TECHWOOD	0944,1708,0442
S	DVD	TERAPIN	0995
S	DVD	TEVION	0440,0246,0346,0446,0646,0746,0846
S	DVD	THETA DIGITAL	0042
S	DVD	TIVO	0892,0592
S	DVD	TOSHIBA	1612,1013,1613,0441,0998,0094,0999
S	DVD	TREDEX	0795
S	DVD	TRUTECH	1906,0798,1713
S	DVD	UNITED	0546
S	DVD	VENTURER	0546
S	DVD	WESTINGHOUSE	0300
S	DVD	WHARFEDALE	0845,0343
S	DVD	WHITE WESTINGHOUSE	0447
S	DVD	X-BOX	0542
S	DVD	XENIUS	0440
S	DVD	YAMAHA	0641,0643,0599,0699,0442
S	DVD	YAMAKAWA	0445,0444,1407
S	DVD	ZENITH	0441,0142,0392
S	DVD-RECORDERS + R APEX		0495
S	DVD-RECORDERS + R ASPIRE		0994
S	DVD-RECORDERS + R BROKSONIC		0398
S	DVD-RECORDERS + R CENTRIOS		0796,1607,1707
S	DVD-RECORDERS + R COBY		0091
S	DVD-RECORDERS + R CYBERHOME		0595
S	DVD-RECORDERS + R EMERSON		0591
S	DVD-RECORDERS + R GO-VIDEO		0744,0891,0791
S	DVD-RECORDERS + R HITACHI		0543,0340
S	DVD-RECORDERS + R HUMAX		0892
S	DVD-RECORDERS + R ILO		0597
S	DVD-RECORDERS + R INSIGNIA		0392
S	DVD-RECORDERS + R JVC		0691,1808
S	DVD-RECORDERS + R KXD		0091
S	DVD-RECORDERS + R LG		0392
S	DVD-RECORDERS + R LITEON		0891,0491,0597
S	DVD-RECORDERS + R MAGNAVOX		0599,0699
S	DVD-RECORDERS + R MEDION		0991,0597
S	DVD-RECORDERS + R MEMOREX		1606,1413
S	DVD-RECORDERS + R MUSTEK		0744
S	DVD-RECORDERS + R ORITRON		1607
S	DVD-RECORDERS + R PANASONIC		0340
S	DVD-RECORDERS + R PHILIPS		0599,0699,1211
S	DVD-RECORDERS + R PHILIPS-MAGNAVOX		0599,0699
S	DVD-RECORDERS + R PIONEER		0399,0592,1010
S	DVD-RECORDERS + R POLAROID		0140
S	DVD-RECORDERS + R RCA		0542
S	DVD-RECORDERS + R SAMSUNG		0790
S	DVD-RECORDERS + R SANYO		0092
S	DVD-RECORDERS + R SELECTRON		1609
S	DVD-RECORDERS + R SHARP		0391
S	DVD-RECORDERS + R SONY		0300,0400,0500
S	DVD-RECORDERS + R SYLVANIA		1212,0591
S	DVD-RECORDERS + R SYMPHONIC		0591
S	DVD-RECORDERS + R TOSHIBA		0998,0441,1013
S	DVD-RECORDERS + R TRUTECH		1906
S	DVD-RECORDERS + R YAMAHA		0599,0699
S	DVD-RECORDERS + R ZENITH		0392
S	DVR	AT&T	0938
S	DVR	HUGHES	0659
S	DVR	HUMAX	0892
S	DVR	PANASONIC	0938,0340
S	DVR	PHILIPS	0738,0036,0136
S	DVR	PIONEER	0592,0399
S	DVR	POLAROID	1813
S	DVR	RCA	0542
S	DVR	REPLAYTV	0938
S	DVR	SONIC BLUE	0938
S	DVR	SONY	0838,0367,0537,0300,0400,0500
S	DVR	TiVo	0738,0838,0036,0136,0367,0999,0892,0592
S	DVR	TOSHIBA	0999
S	DVR-CAB	CABLEVISION	0252
S	DVR-CAB	ILLICO	0252
S	DVR-CAB	PIONEER	0252
S	DVR-CAB	RCN	0954
S	DVR-CAB	ROGERS	0252
S	DVR-CAB	SCIENTIFIC ATLANTA	0252
S	DVR-CAB	TIME WARNER	0252
S	DVR-CAB	VIDEOTRON	0252
S	DVR-DVD	HUMAX	0892
S	DVR-DVD	ILO	0597
S	DVR-DVD	JVC	1808
S	DVR-DVD	LITEON	0597
S	DVR-DVD	MEDION	0597
S	DVR-DVD	PANASONIC	0340

S	DVR-DVD	PIONEER	0592,0399
S	DVR-DVD	POLAROID	1813
S	DVR-DVD	SONY	0300,0400,0500
S	DVR-DVD	TIVO	0892,0592
S	DVR-DVD	TOSHIBA	0999,0998,1013
S	DVR-SAT	BELL EXPRESSVU	0366,0167
S	DVR-SAT	DIRECTV	1506
S	DVR-SAT	DISH NETWORK	0167,0366
S	DVR-SAT	DREAMBOX	0663
S	DVR-SAT	ECHOSTAR	0167,0366
S	DVR-SAT	EXPRESSVU	0366,0167
S	DVR-SAT	FORTEC STAR	0558,0157,0257
S	DVR-SAT	HUGHES NETWORK	0763,0659
S	DVR-SAT	PHILIPS	0763
S	DVR-SAT	PROSCAN	0966
S	DVR-SAT	RCA	0966
S	DVR-SAT	SAMSUNG	0959
S	DVR-SAT	SONY	0367,0567
S	DVR-SAT	ULTIMATE TV	0966,0567
S	DVR-SAT	ZENITH	0267
S	HDTV	GO VIDEO	0662
S	HDTV	HITACHI	0864
S	HDTV	HUGHES	0362,0864,0765
S	HDTV	LG	0362,0864,0765
S	HDTV	MITSUBISHI	0864
S	HDTV	MOTOROLA	0463
S	HDTV	PHILIPS	0864
S	HDTV	PIONEER	0062
S	HDTV	PROSCAN	0265
S	HDTV	RCA	0467
S	HDTV	SAMSUNG	0959
S	HDTV	SONY	0963
S	HDTV	SYLVANIA	0759
S	HDTV	TOSHIBA	0362,0765
S	HDTV	ZENITH	0065
S	HOME AUTOMATION	GE HOME MINDER	0201
S	HOME AUTOMATION	HOME AUTOMATION	0401
S	HOME AUTOMATION	LUTRON	0390
S	HOME AUTOMATION	X-10 (NEC)	0501
S	LD	DENON	0132
S	LD	PIONEER	0132
S	LD	PROSCAN	0432
S	LD	RCA	0432
S	LD	SANYO	0824
S	LD	SONY	0933
S	LD	ZENITH	0824
S	SAT	AMPLICA	0159
S	SAT	BELL EXPRESSVU	0067,0366,0167,0464
S	SAT	CENTURY	0356
S	SAT	CHANNEL MASTER	0359,0459,0559
S	SAT	CHAPPARAL	0657,0757
S	SAT	CHEYENNE	0757
S	SAT	DIRECTV	0863,0864,0564,0564,0963,0259,0260,0263,0962,0664,0065,0265,0465,0765,0866,0966,0367,0567,0362,0563,15
S	SAT	DISH NETWORK	0464,0167,0366,0862,0067,0460,0560,0660
S	SAT	DISHPRO	0460,0560,0660,0067
S	SAT	DRAKE	0857,0059,0360
S	SAT	DX ANTENNA	0458,0859
S	SAT	ECHOSPHERE	0464
S	SAT	ECHOSTAR	0464,0167,0366,0862,0067,0460,0560,0660
S	SAT	EXPRESSVU	0067,0366,0167,0464
S	SAT	FORTEC STAR	0558,0157,0257,0357,0457,0557
S	SAT	FUJITSU	0760,0860
S	SAT	GE	0265,0566,0365,0863,0966,0666,0766,0866
S	SAT	GEMINI	0161
S	SAT	GENERAL INSTRUMENT (GI)	0364,0865,0965,0466,0665,0166,0058,0158,0258,0960
S	SAT	GLOBECAST	0956,1306
S	SAT	GO VIDEO	0662
S	SAT	HITACHI	0465,0564,0664,0864,0765,0362
S	SAT	HUGHES NETWORK	0864,0763,0765,0465,0564,0362,0659
S	SAT	JVC	0464,0862
S	SAT	KENWOOD	0461
S	SAT	LG	0362,0864,0765
S	SAT	LUXOR	0561
S	SAT	MACOM	0661
S	SAT	MAGNAVOX	0259,0862,0565
S	SAT	MITSUBISHI	0765,0864,0465,0564,0664,0362
S	SAT	MOTOROLA	0466,0463
S	SAT	NET	0456,0262
S	SAT	NORSTAT	0761
S	SAT	NOVAPLEX	0155
S	SAT	PACE	0063,0163,0266
S	SAT	PANASONIC	0264,0260,0261
S	SAT	PANSAT	0060,1406
S	SAT	PHILIPS	0259,0862,0763,0564,0664,0864,0465,0765,0565,0362,0162
S	SAT	PHILIPS-MAGNAVOX	0259,0862,0565
S	SAT	PIONEER	0062
S	SAT	PRIMESTAR	0364,0665
S	SAT	PROSAT	0957
S	SAT	PROSCAN	0265,0365,0666,0966,0766,0866
S	SAT	RCA	0265,0566,0365,0863,0467,0966,0666,0766,0866,0411
S	SAT	REALISTIC	0961,0358
S	SAT	SAMSUNG	0061,0959,0962,0263,0563,0655
S	SAT	SHARP	0062
S	SAT	SIERRA I, II, III	0757
S	SAT	SKY NETWORK	0063,0163,0266,0355,0455,0555



S	SAT	SONY	0963,0367,0567,0160,0861
S	SAT	STAR SIGHT	0964
S	SAT	STAR TRAK	0462
S	SAT	STARCHOICE	0665,0166,0364
S	SAT	STS	0458,0658,0758
S	SAT	SUPER GUIDE	0562
S	SAT	SYLVANIA	0759
S	SAT	TELSAT	0356
S	SAT	TOSHIBA	0765,0864,0465,0564,0664,0362,0858,0064,0164,0764
S	SAT	TVA	0756
S	SAT	ULTIMATE TV	0966,0567
S	SAT	UNIDEN	0964,0958,0762
S	SAT	UNITED	0361
S	SAT	VIDEO CIPHER II	0059
S	SAT	VISIONTEC	0856
S	SAT	WEB TV	0862,0160
S	SAT	ZENITH	0363,0065,0267,0161,0266,0857,0059,0360,0165
S	TV	ABEX	0120
S	TV	ADMIRAL	0603,0224,0701
S	TV	ADVENT	0213,0219,0893
S	TV	ADVENTURA	0019
S	TV	AIKO	0407
S	TV	AIWA	0121,0221,0324,0528
S	TV	AKAI	0112,0801,0309,1315,1415,0027,1112,1912,1515
S	TV	ALLERON	0706
S	TV	AMARK	0603
S	TV	AMTRON	0906
S	TV	ANAM NATIONAL	0906,0901,0104,0805,0920
S	TV	AOC	0002,0102,0502,1502,0003,0217,0119,0320
S	TV	APEX	0023,0223,0123,1814,0741
S	TV	ARCHER	0603
S	TV	ASPECT	0507
S	TV	AUDIOVOX	0906,1503,1313
S	TV	AXION	0319,0793
S	TV	BANG & OLUFSEN	0620
S	TV	BELCOR	0002
S	TV	BELL & HOWELL	0704,0506,0601,0701
S	TV	BENQ	0709,0909,0711,1616
S	TV	BLUESKY	1117,0016
S	TV	BRADFORD	0906
S	TV	BROKSONIC	0316,0115,0626,0327,0632,0041
S	TV	BROKWOOD	0002
S	TV	CANDLE	0002,0502,0019,0402
S	TV	CAPEHART	0119
S	TV	CCE	1916
S	TV	CELEBRITY	0801
S	TV	CELERA	0023
S	TV	CENTRIOS	0518
S	TV	CENTURION	0502
S	TV	CETRONIC	0805
S	TV	CHANGHONG	0023,0741
S	TV	CINERAL	0407,0016
S	TV	CITIZEN	0002,0502,0906,0112,0512,0520,0115,0701,0402,0805,0407
S	TV	CLAIRTONE	0003
S	TV	CLASSIC	0023,0741,0805
S	TV	CLP	0010
S	TV	CLP CLASSIC	0022,0005,0007
S	TV	COBY	1710,1014
S	TV	COLOR VOICE	0602
S	TV	COLORTYME	0002,0502,0602
S	TV	CONCERTO	0002,0502
S	TV	CONCIERGE	0713
S	TV	CONTEC	0906,0802,0003,0805
S	TV	CORNEA	0606
S	TV	CRAIG	0906,0805
S	TV	CROSLEY	0807
S	TV	CROWN	0906,0805
S	TV	CTX	0603
S	TV	CURTIS MATHES	0704,0112,0614,0002,0502,0601,0506,0512,0437,0701,0103
S	TV	CXC	0906,0805
S	TV	CYBERVISION	0016
S	TV	DAEWOO	0614,0002,0502,0611,0102,0415,0905,0615,0505,0826,0529,0046,0609,0805,0407,0303,0602,0214,0403,0314,05
S	TV	DAYTRON	0002,0502
S	TV	DELL	0522,0404,0814
S	TV	DIAMOND VISION	0622,0496,0810
S	TV	DIGIMATE	1303
S	TV	DIGISTAR	1503,0118,0413,0213,0318,0814,1603,1716,1816
S	TV	DIMENSIA	0704,0601
S	TV	DISNEY	0417,0115
S	TV	DUKANE	0507,0808
S	TV	DUMONT	0713,0002
S	TV	DURABRAND	0520,0115,0916,0126,0447,0323,0317,1115
S	TV	DYNASTY	0805
S	TV	ELECTROBAND	0801,0003
S	TV	ELECTROHOME	0002,0502,0027,0901,0803
S	TV	ELEKTRA	0701
S	TV	ELITE VIDEO	0321
S	TV	EMERSON	0002,0502,0006,0115,0506,0706,0520,0906,0316,0505,0614,0622,0324,0924,0626,0826,0027,0327,0128,0228,06
S	TV	ENVISION	0002,0502,0009,1502
S	TV	ESA	0520
S	TV	FISHER	0506,0612,0428,0619,0802
S	TV	FUJITSU	0321,0706,1202
S	TV	FUNAI	0706,0520,0906,0324,0247,0805
S	TV	FUTURETEC	0906,0805
S	TV	GATEWAY	0206

S	TV	GE	0704,0312,0018,0002,0502,0006,0007,0601,0835,0901,0114,0103,0803,0806,0310
S	TV	GIBRALTER	0713,0002
S	TV	GOLDSTAR	0002,0502,0102,0324,0435,0802,0307,0609,0217
S	TV	GRADIENTE	1902,0002,0916,1617,1517
S	TV	GRUNDY	0706,0906
S	TV	GUESTVISION	0721
S	TV	GVISION	1102
S	TV	HAIER	0709,0223,0323,0317,1316
S	TV	HALLMARK	0002,0502
S	TV	HARVARD	0906
S	TV	HEWLETT PACKARD	1103,1002
S	TV	HISENSE	0908,0819,0223,1203
S	TV	HITACHI	0410,0507,0815,0607,0808,0002,0502,0710,1801,0701,0802,0707,0315,0515,0715,0519,0324
S	TV	HYUNDAI	1015
S	TV	ILO	0421,1608,1004,1903,0216,0520
S	TV	IMA	0906
S	TV	IN FOCUS	0601
S	TV	INFINITY	0807,0430
S	TV	INITIAL	1608,0216,1110,1512
S	TV	INSIGNIA	0911,0520,0323,0115,0914,0213,0318,1416,0247,0504
S	TV	INTEGRA	0719
S	TV	INTEQ	0713
S	TV	JANEIL	0019
S	TV	JBL	0807
S	TV	JC PENNEY	0704,0002,0102,0502,0112,0312,0512,0007,0601,0310,0402,0802,0103,0803,0604,0806
S	TV	JCB	0801
S	TV	JENSEN	0002,0502,0914
S	TV	JVC	0607,0204,0321,0508,0617,0326,0993,0802,0108,0308,0715
S	TV	KAWASHO	0002,0502,0801
S	TV	KAYPANI	0119
S	TV	KEC	0805,0906
S	TV	KENWOOD	0002,0502
S	TV	KLH	0023
S	TV	KLOSS NOVABEAM	0408,0019
S	TV	KOGI	1102
S	TV	KONKA	0906,0702,0203,0306,0208,0911,0842,0942,0504
S	TV	KTV	0906,0003,0703,0805,0608
S	TV	KURAZAI	0701
S	TV	LASONIC	0622,0496
S	TV	LEGEND	0213
S	TV	LG	0002,0606,0502,0102,0117,0814,0324,0435,0802,0307,0609,0217
S	TV	LIQUIDVIDEO	0319,0418,0793
S	TV	LODGENET	0704,0821,0601,0701
S	TV	LOEWE	0722,0807
S	TV	LOGIK	0704,0601,0701
S	TV	LUCE	0107
S	TV	LUXMAN	0002,0502
S	TV	LXI	0704,0002,0502,0506,0807,0312,0512,0601,0324,0103
S	TV	MAGNASONIC	0706
S	TV	MAGNAVOX	0807,0002,0502,0919,1914,0224,0430,0247,0402,0408,0109,0715
S	TV	MAJESTIC	0704,0601,0701
S	TV	MARANTZ	0807,0719,0002,0502
S	TV	MAXENT	0206
S	TV	MEDION	0922,0421,0417
S	TV	MEGATRON	0002,0502,0507
S	TV	MEI	0003
S	TV	MEMOREX	0002,0502,0506,0706,0115,0704,0601,1302,0428,0632,0701
S	TV	MGA	0002,0102,0502,0706,0802,0803,0715,0619
S	TV	MIDLAND	0704,0713,0007,0312,0103
S	TV	MINTEK	0216
S	TV	MINUTZ	0806
S	TV	MITSUBISHI	0102,0716,0706,0002,0502,0027,0803,0715,0619
S	TV	MONIVISION	0205
S	TV	MONTGOMERY WARD	0704,0701,0601
S	TV	MOTEVA	0506,1902
S	TV	MOTOROLA	0603,0901
S	TV	MTC	0002,0102,0502,0112,0512,0003
S	TV	MULTITECH	0906
S	TV	MULTIVISION	0010
S	TV	MYRON & DAVIS	0822
S	TV	NAD	0002,0502,0512,0120
S	TV	NEC	0719,0002,0102,0502,0901,0602,0111,0715
S	TV	NET TV	0206,0014
S	TV	NEXXTECH	1806,0318
S	TV	NIKEI	0805
S	TV	NIKKO	0002,0502,0407
S	TV	NIKO	1915
S	TV	NORCENT	0223,0905,0207
S	TV	NTC	0407
S	TV	OLEVIA	1304,1802,1615,1815,1217
S	TV	ONCOMMAND	0721
S	TV	ONKING	0805
S	TV	ONWA	0906,0805
S	TV	OPTIMUS	0618,0120,0039,0739
S	TV	OPTOMA	1404
S	TV	OPTONICA	0603,0111
S	TV	ORION	0713,0115,0105
S	TV	PANASONIC	0718,0416,0007,0618,0807,0039,0739,0345,0696,0901,0608
S	TV	PHILCO	0807,0002,0102,0502,0919,0702,1417,0408,0109,0715,0901,0402
S	TV	PHILIPS	0807,0022,0020,0422,0122,0222,0322,0002,0520,0919,0521,0621,0709,1516,1017,0430,0247,0901,0402,0408,01
S	TV	PHILIPS-MAGNAVOX	0807,0022,0322,0919,0224,0430
S	TV	PILOT	0002
S	TV	PIONEER	0120,0719,0808,0002,0502,0610,0519
S	TV	PIVA	1109
S	TV	PLANAR	1302

S	TV	POLAROID	0819,0918,0914,1503,1215,0504
S	TV	PORTLAND	0002,0102,0502,0415,0614
S	TV	PRECISION	0218
S	TV	PRICE CLUB	0112
S	TV	PRIMA	1503,0118,0213,0318,0219
S	TV	PRINCETON GRAPHICS	0603,0511
S	TV	PRISM	0007
S	TV	PROSCAN	0704,0312,0103,0601,0817,0917
S	TV	PROTON	0820,0002,0502,1602,0910,0119,0220
S	TV	PROTRON	1303,1317
S	TV	PROVIEW	1104,1204,1304
S	TV	PULSAR	0713,0002
S	TV	QUASAR	0718,0416,0007,0618,0807,0039,0739,0901,0608
S	TV	RADIO SHACK	0704,0002,0406,0506,0906,0618,0502,0324,0835,0601,0802,0705,0805,0111
S	TV	RCA	0704,0002,0406,0007,0011,0611,0811,0312,0514,0720,0102,0502,0601,0817,0917,0835,0901,0103,0803,0211,09
S	TV	REALISTIC	0704,0002,0406,0506,0906,0618,0502,0601,0324,0802,0705,0805,0111
S	TV	RHAPSODY	0003
S	TV	RUNCO	0713,0719,0712
S	TV	SAMPO	0014,0206,0002,0502,0119,0802
S	TV	SAMSUNG	0112,0309,0209,0512,0302,0502,0002,0102,0110,0818,0895,0437,0802,0103,0609,0012,0212
S	TV	SAMSUX	0502
S	TV	SAMTRON	0112
S	TV	SANSUI	0115,0632
S	TV	SANTECA	0021
S	TV	SANYO	0506,0311,0612,0002,0428,0802,0412,0619
S	TV	SCEPTRE	0516,1814
S	TV	SCOTCH	0002,0502
S	TV	SCOTT	0002,0502,0706,0906,0004,0105,0805
S	TV	SEARS	0704,0807,0506,0706,0112,0002,0502,0312,0512,0612,0520,0601,0812,0509,0041,0247,0802,0103,0619
S	TV	SELECTION	1803,1603,1703
S	TV	SEMP	1701
S	TV	SHARP	0509,0913,0907,0603,0002,0502,0224,0228,0202,0111,0813
S	TV	SHOGUN	0002
S	TV	SIGNATURE	0704,0601,0701,0903
S	TV	SIMPSON	0402
S	TV	SONIC	0003
S	TV	SONY	0414,0902,0801,0708,0639,0816
S	TV	SOUNDESIGN	0002,0502,0706,0906,0402,0805
S	TV	SOVA	1901,1111
S	TV	SOYO	1614,1714
S	TV	SPECTRA	0622
S	TV	SPECTRAVISION	0921
S	TV	SQUAREVIEW	0520
S	TV	SSS	0002,0906,0805
S	TV	STAR SIGHT	0008
S	TV	STARLITE	0906
S	TV	SUPERSCAN	0812,0509,0247
S	TV	SUPERSONIC	0096
S	TV	SUPRA	0002,0809
S	TV	SUPREMACY	0019
S	TV	SUPREME	0801
S	TV	SVA	0223,0822
S	TV	SYLVANIA	0807,0002,0502,0115,0520,0919,1715,0324,0247,0447,0402,0408,0109,0715,0717
S	TV	SYMPHONIC	0906,0520,0324,0247,0004
S	TV	SYNTAX	1304,1615,1815
S	TV	TANDY	0603
S	TV	TATUNG	0709,0421,0901
S	TV	TECHNICS	0007
S	TV	TECHWOOD	0002,0502,0007
S	TV	TEKNIKA	0704,0002,0102,0502,0706,0906,0112,0512,0618,0601,0019,0701,0402,0802,0805
S	TV	TELECATION	0313
S	TV	TELERENT	0704,0601,0701
S	TV	TERA	0002,0220
S	TV	TEVION	0421
S	TV	TMK	0002,0502
S	TV	TOSHIBA	0517,0419,0512,0613,0719,0112,0506,0111,0618,0627,0437,0041,0094,0802,0111,0313,0715
S	TV	TRUTECH	1504,1116,1713
S	TV	UNIVERSAL	0806,0310
S	TV	VICTOR	0607
S	TV	VIDTECH	0002,0102,0502
S	TV	VIEWSONIC	0206,0808,1003,1016
S	TV	VIKING	0019
S	TV	VIORE	1403
S	TV	VIZIO	0709,1702
S	TV	WARDS	0704,0807,0002,0102,0502,0706,0601,0408,0109,0310,0111,0513,0806,0701,0402,0004
S	TV	WESTINGHOUSE	0915,0013,1216,0300
S	TV	WHITE WESTINGHOUSE	0611,0614,0415,0215,1402,0324,0529,0609
S	TV	YAMAHA	0618,0002,0102,0502
S	TV	ZENITH	0713,0502,0606,0409,0710,0415,0507,0714,0405,0712,0015,0916,0008,0002,0115,0224,0324,0126,0326,0826,02
S	VCR	ACCELE	0037
S	VCR	ADMIRAL	0224
S	VCR	ADVENTURA	0726
S	VCR	AIKO	0826
S	VCR	AIWA	0126,0324,0528,0726
S	VCR	AKAI	0324,0524,0424,0624,0724,0027,0931,0335
S	VCR	ALLEGRO	0326,0534,0925
S	VCR	AMERICAN HIGH	0830
S	VCR	APEX	0596
S	VCR	ASHA	0037
S	VCR	AT&T	0938
S	VCR	AUDIO DYNAMICS	0239,0339,0025
S	VCR	AUDIOVOX	0126
S	VCR	BEAUMARK	0037
S	VCR	BELL & HOWELL	0428
S	VCR	BROKSONIC	0227,0626,0327,0632,0041,0398,0325,0530

S	VCR	CALIX	0126
S	VCR	CANDLE	0625,0126,0037,0025,0825,0026
S	VCR	CANNON	0124,0830,0535
S	VCR	CAPEHART	0534
S	VCR	CARVER	0330
S	VCR	CCE	0826,0237
S	VCR	CINEVISION	0126
S	VCR	CITIZEN	0625,0126,0826,0037,0025,0825,0026
S	VCR	COLORTYME	0025
S	VCR	COLT	0237
S	VCR	CRAIG	0126,0037,0237,0426
S	VCR	CURTIS MATHES	0124,0330,0324,0035,0037,0437,0025,0526,0830
S	VCR	CYBERNEX	0037
S	VCR	DAEWOO	0529,0625,0626,0826,0035,0825,0026,0726,0798
S	VCR	DBX	0239,0339,0025
S	VCR	DENON	0132
S	VCR	DIAMOND VISION	0291
S	VCR	DIMENSIA	0124
S	VCR	DURABRAND	0126
S	VCR	DYNATECH	0324,0726
S	VCR	ELECTROHOME	0126,0027
S	VCR	ELECTROPHONIC	0126
S	VCR	EMERSON	0626,0126,0826,0227,0327,0630,0632,0134,0037,0625,0924,0324,0128,0228,0428,0528,0447,0247,0724,0325,05
S	VCR	FISHER	0032,0428,0328,0330,0025,0426,0928,0029
S	VCR	FUJI	0524,0830
S	VCR	FUNAI	0324,0247,0447,0726
S	VCR	GARRARD	0726
S	VCR	GE	0124,0732,0135,0835,0037,0429,0830
S	VCR	GO-VIDEO	0037,0139,0342,0244,0147,0798,0438
S	VCR	GOLDSTAR	0324,0126,0435,0534,0236,0025
S	VCR	GRADIENTE	0726,0126
S	VCR	HARLEY DAVIDSON	0726
S	VCR	HARMAN KARDON	0025,0027
S	VCR	HARWOOD	0237
S	VCR	HEADQUARTER	0428
S	VCR	HI-Q	0426
S	VCR	HITACHI	0538,0324,0336,0931,0834
S	VCR	INFINITY	0430
S	VCR	INSIGNIA	0126,0392
S	VCR	INSTANT REPLAY	0324,0830
S	VCR	INTEQ	0126
S	VCR	JC PENNEY	0124,0126,0428,0037,0538,0239,0339,0830,0931,0834,0935,0025
S	VCR	JCL	0830
S	VCR	JENSEN	0538,0931
S	VCR	JVC	0239,0339,0428,0326,0443,0691,0025,0931
S	VCR	KENWOOD	0428,0239,0339,0025,0931
S	VCR	KLH	0237
S	VCR	KODAK	0126,0830
S	VCR	LG	0324,0534,0435,0392
S	VCR	LITEON	1508
S	VCR	LLOYD	0324,0726
S	VCR	LOGIK	0237
S	VCR	LXI	0324,0126
S	VCR	MAGNAVOX	0330,0430,0534,0324,0224,0124,0230,0125,0247,0093,0598,0830
S	VCR	MAGNIN	0037
S	VCR	MARANTZ	0330,0428,0239,0339,0530,0830,0535,0025
S	VCR	MARTA	0126
S	VCR	MATSUSHITA	0830
S	VCR	MEDION	0291
S	VCR	MEI	0830
S	VCR	MEMOREX	0330,0126,0428,0032,0632,0534,0037,0224,0324,0335,0426,0726,0830
S	VCR	MGA	0630,0027
S	VCR	MGN TECHNOLOGY	0037
S	VCR	MIDLAND	0429
S	VCR	MINOLTA	0538,0834
S	VCR	MITSUBISHI	0630,0431,0538,0239,0339,0131,0027
S	VCR	MONTGOMERY WARD	0224,0631
S	VCR	MOTOROLA	0224,0830
S	VCR	MTC	0324,0037,0726
S	VCR	MULTITECH	0324,0037,0726,0429,0237
S	VCR	NEC	0428,0239,0339,0530,0731,0831,0931,0025,0526
S	VCR	NEXXTECH	0334,0546,0596
S	VCR	NIKKO	0126
S	VCR	NOBLEX	0037
S	VCR	OLYMPUS	0830
S	VCR	OPTIMUS	0525,0037,0937,0126,0737,0039,0739,0224
S	VCR	OPTONICA	0037,0631
S	VCR	ORION	0227,0632
S	VCR	PANASONIC	0937,0739,0039,0938,0124,0345,0830
S	VCR	PENTAX	0538,0025,0834
S	VCR	PHILCO	0330,0124,0125,0830
S	VCR	PHILIPS	0330,0430,0036,0136,0738,0439,0939,0247,0230,0830
S	VCR	PHILIPS-MAGNAVOX	0330,0430,0224
S	VCR	PILOT	0126
S	VCR	PIONEER	0132,0538,0239,0339,1010,0935
S	VCR	POLAROID	0596
S	VCR	PORTLAND	0825,0026
S	VCR	PROSCAN	0124,0432
S	VCR	PROTEC	0237
S	VCR	PULSAR	0534
S	VCR	QUARTER	0428
S	VCR	QUARTZ	0428
S	VCR	QUASAR	0937,0039,0124,0739,0830
S	VCR	RADIO SHACK	0124,0224,0324,0525,0126,0428,0835,0037,0737,0937,0426,0726,0027,0029,0830,0631,0335
S	VCR	RADIX	0126

S	VCR	RANDEX	0126
S	VCR	RCA	0124,0126,0432,0532,0732,0832,0932,0033,0133,0233,0135,0835,0037,0538,0424,0429,0830,0834
S	VCR	REALISTIC	0124,0224,0324,0126,0428,0037,0737,0937,0426,0726,0027,0029,0830,0631,0335
S	VCR	REPLAYTV	0938
S	VCR	RICOH	0936
S	VCR	RIO	0126,0142
S	VCR	RUNCO	0534
S	VCR	SAMSUNG	0037,0437,0625,0538,0147,0895,0997,0624,0335
S	VCR	SAMTRON	0139
S	VCR	SANKY	0224,0534
S	VCR	SANSUI	0632,0239,0339,0041,0227,0398,0931
S	VCR	SANYO	0824,0032,0328,0428,0037,0426
S	VCR	SCOTT	0625,0626,0327,0630,0735,0325,0927
S	VCR	SEARS	0937,0126,0428,0330,0538,0041,0247,0426,0928,0029,0830,0834,0935
S	VCR	SHARP	0637,0737,0224,0324,0228,0825,0027,0631
S	VCR	SHINTOM	0524,0936,0538,0237,0337
S	VCR	SHOGUN	0037
S	VCR	SIGNATURE	0324
S	VCR	SINGER	0830,0237
S	VCR	SONIC BLUE	0938
S	VCR	SONY	0539,0034,0524,0933,0936,0540,0838,0038,0138,0238,0639
S	VCR	STS	0538,0830,0834
S	VCR	SUPERSCAN	0247
S	VCR	SYLVANIA	0324,0330,0630,0124,0247,0726,0830,0225,0447,1212
S	VCR	SYMPHONIC	0324,0225,0247,0726
S	VCR	TANDY	0324,0428
S	VCR	TASHIKO	0126
S	VCR	TATUNG	0931
S	VCR	TEAC	0324,0726,0931
S	VCR	TECHNICS	0830
S	VCR	TECHWOOD	1708
S	VCR	TEKNIKA	0324,0126,0134,0726,0830
S	VCR	TiVo	0738,0838
S	VCR	TMK	0037,0526,0731
S	VCR	TOSHIBA	0625,0727,0627,0330,0630,0437,0538,0094,0441,0029,0735
S	VCR	TOTEVISION	0126,0037
S	VCR	TRUTECH	0798
S	VCR	UNITECH	0037
S	VCR	VECTOR RESEARCH	0625,0239,0339,0025
S	VCR	VICTOR	0239,0339
S	VCR	VIDEO CONCEPTS	0625,0239,0339,0025,0027
S	VCR	VIDEOSONIC	0037
S	VCR	WARDS	0124,0224,0324,0625,0126,0037,0538,0426,0726,0027,0830,0631,0234,0834,0735,0237
S	VCR	WHITE WESTINGHOUSE	0324,0529
S	VCR	XR-1000	0726,0830,0237
S	VCR	YAMAHA	0025,0931,0239,0339
S	VCR	ZENITH	0534,0326,0826,0228,0430,0224,0324,0435,0336,0936,0437,0126,0524,0632,0824,0239,0339,0529,0438,0925