

# Studer A727 and A730

## Wireless Remote Adapter Instructions

**Installation:** Turn off the power to the CD player. Plug the remote adapter into the remote connector on the back. Now power can be turned back on. The light on the front of the remote adapter should be on.

The remote adapter controls the following eight functions (if supported): Play, Pause, Next, Previous, Fast Forward, Rewind, Locate and Start-Review. Pause can be activated by pressing either the Pause button or the Stop button. Locate is activated by pressing #1 on the number key pad. Start-Review is activated by pressing #2 on the number key pad. Previous and Next are controlled by the two buttons above the Rewind and F.F. buttons or by the left and right arrow buttons next to the orange SELECT button. If the wireless remote adapter does not work it may be because the external remote is not enabled in the CD player settings. Check setting "User 4 – Remote" in the decks menu and make sure it is set to On or Enabled.

JMP1	JMP2	DirecTV
JMP*	JMP*	20533
JMP	OPEN	21070
OPEN	JMP	21432
OPEN	OPEN	21431

\* = Default jumper selection

**Configuring the DirecTV Remote:** To program the remote first slide the switch at the top to AV1 or AV2. Press and hold the MUTE and SELECT buttons until the green light at the top blinks twice then release. Using the number keypad enter the 5 digit device code from the table above. If done correctly the green light will blink twice after the last digit is entered. The full manual for the DirecTV remote can be found here: [www.revoxremotes.com/Remotes/DirecTV.htm](http://www.revoxremotes.com/Remotes/DirecTV.htm)

[www.R2R-Remotes.com](http://www.R2R-Remotes.com)

