

Remote Instructions

Studer A810 Wireless Remote Adapter

Installation: Turn off the power to the tape deck. Plug the remote adapter into the Parallel Remote connector on the top or back of the tape deck. Now power can be turned back on. The light on the front of the remote adapter should be on. If the deck has a button labeled "REM CONT" it will need to be enabled for the wireless remote to work.

The remote adapter controls the standard 5 transport functions: Play, Stop, F.F., Rewind and Record as well as Lifter and Locate 1. It can be used with any universal remote programmed for the proper Sony VCR code. The 5 transport functions are controlled via the remote using the Play, Stop, F.F., Rewind and Record buttons near the top of the remote. Record must be pressed twice to send the record command and then followed by the Play button within 1.5 seconds in order to put the deck into record (equivalent to pressing Record+Play on the deck). Locate is controlled by the "1" button on the remote keypad and Lifter Defeat is controlled by the "0" button on the remote keypad.

The remote adapter can be programmed to respond to four different Sony remote codes. To select between them there are two jumpers inside the unit. Remove the two screws on the bottom of the unit and remove the top cover. Located near the front window is a jumper block with two jumpers. These jumpers configure what type of Sony remote codes the unit will respond to. See the table below for a list of jumper settings.

JMP1	JMP2	Device Code	DirectTV	
JMP	JMP	Beta VCR	20033	*
JMP	OPEN	8mm VCR	20034	#
OPEN	JMP	VHS VCR	20032	
OPEN	OPEN	LDP	----	

* = Default setting # = Not supported on RC66 remote

Configuring the DirecTV Remote: To program the DirecTV remote first slide the switch at the top to AV1 or AV2. Press and hold the MUTE and SELECT buttons at the same time until the green light at the top blinks twice then release. Using the number keypad enter the 5 digit device code from the table above. If done correctly the green light will blink twice after the last digit is entered. Note: On the DirecTV remote the Record button must be double pressed to activate the function. The remotes manual can be found here: www.teacremotes.com/Remotes/DirecTV.htm

www.R2R-Remotes.com

