

# RCA

## Universal Remote



1 TV



1 VCR



1 Cable Box

MENU  
FUNCTIONS

REPLACES  
**3**  
REMOTES

Controls  
Three  
Devices

Menu  
Functions

Replaces  
Lost or  
Broken  
Remotes

Easy to  
Hold &  
Use

Sleep  
Timer

Extensive  
Code  
Library

Ensures  
greater  
compatibility.  
See back for  
brand list.



MULTI-BRAND USE

RCU1300

# RCA

## Universal Remote Control

SET UP  
INSTRUCTIONS  
INSIDE

### Replace Three Remotes With One!

- **Easy To Use**
- **Menu Button**  
Operates major TV brands including RCA, GE, ProScan, Sony, Magnavox, Philips and Zenith
- **Toll-Free Consumer Helpline**  
See the instruction book for details
- **Built-In Sleep Timer**  
Turn off your TV automatically
- **Simple Set-Up With Code Search**  
Scans entire code library for the right code for your TV, VCR, Cable Box and DBS Receiver

This RCA Universal Remote Is Compatible With Most Models Of The Following Brands  
(Of Infrared Remote Controlled Components manufactured after 1990):

#### TV

Abex	Citizen	Fisher	JVC	Mitsubishi	Pioneer	Scott	Techwood
Admiral	Colortyme	Fujitsu	Kawasho	Montgomery	Portland	Sears	Teknika
Adventura	Concerto	Funai	Kenwood	Ward	Price Club	Sharp	Tera
Aiko	Contec/Cony	Futuretec	Kloss	Motorola	Prism	Shogun	TMK
Akai	Craig	GE	Novabeam	MTC	Proscan	Signature	Toshiba
Alleron	Crown	Gibraltar	KTV	Multitech	Proton	Simpson	Totevision
Amtron	Curtis	Goldstar	Loewe	NAD	Pulsar	Sony	Universal
Anam	Mathes	Grundig	Logik	NEC	Pulser	Soundesign	Victor
National	CXC	Hallmark	Luxman	Nikko	Quasar	Squareview	Vidtech
AOC	Daewoo	Harvard	LXI	NTC	Radio Shack	SSS	Viking
Audiovox	Daytron	Hitachi	Magnavox	Onwa	RCA	Starlite	Wards
Belcor	Dimensia	IMA	Majestic	Optimus	Realistic	Supre-Macy	Yamaha
Bell &	Dumont	Infinity	Marantz	Optonica	Runco	Supreme	York
Howell	Dynatech	Janeil	Megatron	Orion	Sampo	Sylvania	Zenith
Bradford	Electroband	JBL	Memorex	Panasonic	Samsung	Symphonic	
Brokwood	Electrohome	JCB	MGA	Philco	Sansui	Tandy	
Candle	Emerson	JC Penny	Midland	Philips	Sanyo	Tatung	
Celebrity	Envision	Jensen	Minutz	Pilot	Scotch	Technics	

#### VCR

Admiral	Carver	Funai	Lloyd	NEC	Quarter	Singer	Concepts
Adventura	CCE	Garrard	Logik	Nikko	Quartz	Sony	Videosonic
Aiko	Citizen	GE	LXI	Noblex	Quasar	STS	Wards
Aiwa	Colortyme	Goldstar	Magnavox	Olympus	RCA	Sylvania	XR-1000
Akai	Colt	Grandiente	Magnin	Optimus	Radio Shack	Symphonic	Yamaha
American	Craig	Harley	Marantz	Optonica	Radix	Tandy	Zenith
High	Curtis-	Davidson	Marta	Orion	Randex	Tashiko	
Asha	Mathes	Harman	Memorex	Panasonic	Realistic	Tatung	
Audio	Cybernex	Kardon	MGA	Pentax	Ricoh	Teac	
Dynamics	Daewoo	Harwood	MGN	Pentax	Runco	Technics	
Audiovox	Daytron	Headquarter	Technology	Research	Samsung	Teknika	
Bell &	DBX	HI-Q	Midland	Philco	Sanky	TMK	
Howell	Dimensia	Hitachi	Minolta	Philips	Sansui	Toshiba	
Broksonic	Dynatech	JC Penny	Mitsubishi	Pilot	Sanyo	Totevision	
Beaurnark	Electrohome	Jensen	Montgomery	Pioneer	Scott	Unitech	
Calix	Electrohome	JVC	Ward	Portland	Sears	Vector	
Candle	Emerson	Kenwood	Motorola	Proscan	Sharp	Research	
Canon	Fisher	KLH	MTC	Protec	Shintom	Victor	
Capehart	Fuji	Kodak	Multitech	Pulsar	Shogun	Video	

#### Cable Box

ABC	Colour Voice	Gemini	Magnavox	RCA	Signature	Tocom	Zenith
Antronix	Comtronics	General	Movie Time	Regency	Sprucer	Tusa	
Archer	Contec	Instrument	NSC	Rembrandt	Standard	TV86	
Cabletenna	Eastern	Hamlin	Oak	Samsung	Component	Unika	
Cableview	Garrard	Hitachi	Panasonic	Scientific	Starcom	United Cable	
Century	GC	Jasco	Philips	Atlanta	Stargate	Universal	
Citizen	Electronics	Jerold	Pioneer	Signal	Starquest	Viewstar	

DATE CODE  
1109P



0 79000 130849 2

No Setup Required For Most Models

Requires 2 AAA Batteries

Trademark(s) © Registered Marca(s) Registrada(s)  
Thomson Consumer Electronics, Inc.  
Product Exchange Center  
11721 Alameda Ave. Socorro, Tx. 79927  
Made In Indonesia  
PRCU1300 Rev 0799

RCU1300

## Table Of Contents

Button Description .....	2-3
Battery Installation .....	3
Programming Your Universal Remote	
TV .....	4
TV Codes .....	4-5
VCR.....	6
VCR Codes.....	6-7
Cable Box.....	8
Cable Box Codes.....	9
Programming With Code Search .....	9
Retrieval Codes .....	10
TV Menu.....	11
Sleep Feature .....	12
Trouble Shooting.....	13
Help Line .....	13



## Button Description

### INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

### POWER

The POWER button operates the same as your original remote  
 Note: Some RCA, GE and ProScan models require you to press the device button to turn the device on and the POWER button to turn the device off.

### CODE SEARCH

Used to program the remote or to search through codes.

### TV, VCR, & CABLE

The TV, VCR, and CABLE buttons are used to select the device you want to control.

### REW, PLAY, FWD, REC, STOP, & PAUSE

The REW, PLAY, FWD, REC, STOP, & PAUSE buttons operate the same as on your original VCR remote. You must press the REC button twice to begin recording.

### TV•VCR

The TV•VCR button operates the TV•VCR function of your VCR.

### ENTER

The ENTER button is used to complete channel selection for some brands of TV. It is also used to complete the code entry process.

### VOL & CHAN

The VOL (Volume) and CHAN (Channel) buttons increase or decrease the channel numbers or volume.

### MUTE

To MUTE the volume on the TV.

### PREV CH

PREV CH allows you to go to the previous channel you selected. Operates the same as Last Channel, Go Back or Recall button on your original remote.

### 0-9

The number buttons operate the same as on your original remote, and are used for entering device codes or channel numbers.

### MENU

The MENU button calls up the TV set up menu.

### SLEEP

The SLEEP button allows you to set a time to turn off the TV automatically.

## Battery Installation

Your Universal Remote requires 2 new AAA alkaline batteries.

To install the batteries:

1. On the back of the remote, push and slide the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.
3. Press and slide the battery cover back into place.

 
Note: Reprogramming may be required after batteries are removed.

## Programming For TV


1. Manually turn on the TV.

Find the three-digit code for your TV in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

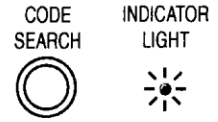

 3. Press and release the **TV** button (The **INDICATOR LIGHT** will blink then remain lit).



 4. Enter the code using the Number Buttons.

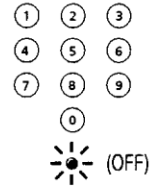

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your TV and press the **POWER** button. Your TV should turn off.

POWER



 
Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your TV on, press **CHAN+**. If the TV responds, no further programming is required.

CHAN



7. Enter your code here for easy reference.

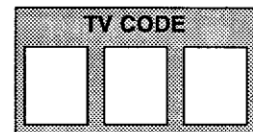

## TV Code List

Abex .....	172	CXC .....	038
Admiral .....	001, 173	Daewoo .....	016, 190, 005
Adventura .....	174	.....	171, 004, 006, 017, 127
Aiko .....	016	Daytron .....	004, 006, 171
Akai .....	002	Dimensia .....	000
Alleron .....	046	Dumont .....	004, 151
Amtron .....	038	Dynatech .....	004
Anam National .....	003, 038	Electroband .....	002
AOC .....	006, 005, 004, 007	Electrohome ..	004, 006, 002, 003
Audiovox .....	038	.....	019, 022
Belcor .....	004	Emerson .....	030, 171, 191, 004
Bell & Howell .....	001, 083, 162	038, 046, 006, 012, 023, 024, 025	026, 027, 028, 029 031, 032, 033
Bradford .....	038	034, 035, 036, 037, 039, 041, 042	043, 044, 047, 123, 124, 162 177
Brokwood .....	004	.....	179
Candle .....	004, 006, 008, 174	Celebrity .....	002
Celebrity .....	002	Citizen ..	016, 171, 004, 006, 008
Citizen ..	016, 171, 004, 006, 008	.....	038, 105, 174, 177
.....	038, 105, 174, 177	Colortyme .....	004, 006
Colortyme .....	004, 006	Concerto .....	004, 006
Concerto .....	004, 006	Contec / Cony .....	012, 013, 038
Contec / Cony .....	012, 013, 038	Craig .....	038
Craig .....	038	Crown .....	038, 171
Crown .....	038, 171	Curtis Mathes .....	171, 000, 004
Curtis Mathes .....	171, 000, 004	.....	006, 015, 105, 162

## TV Code List Continued

 
Goldstar	.....005, 156, 004, 006	Runco	.....151
.....172, 012, 019, 056, 057, 058		Sampo	.....004, 006, 171, 172
.....155, 171		Samsung	.....171, 004, 005, 105
Grundig	.....171, 038, 046	.....006, 012, 015, 017, 019, 104	
Hallmark	.....004, 006	.....106, 172	
Harvard	.....038	Sansui	.....191
Hitachi	.....059, 004, 148, 006, 012	Sanyo	.....048, 080, 004, 180, 162
.....013, 060, 061, 135, 136, 137		.....169, 049	
.....138, 139, 140, 141, 142, 143		Scotch	.....006
.....144, 145, 146, 150, 179		Scott	.....004, 038, 046, 006, 012
IMA	.....038	.....024, 035	
Infinity	.....062	Sears	.....000, 048, 189, 004, 046
Janeil	.....174	.....006, 013, 019, 049, 051, 066	
JBL	.....062	.....072, 109, 110, 162, 180, 181	
JCB	.....002	Sharp	.....173, 095, 171, 004, 006
JC Penny	.....000, 054, 005, 171	.....012, 029, 111, 112, 113, 122	
004, 052, 006, 172, 008, 020, 058		Shogun	.....004
.....063, 064, 072, 087, 105, 181		Signature	.....001, 083
Jensen	.....004, 006	Simpson	.....008
JVC	.....159, 013, 012, 182, 054	Sony	.....002, 218
060, 065, 066, 067, 123, 157, 158		Soundesign	.....004, 038, 046, 006
Kawasho	.....002, 004, 006	.....008	
Kenwood	.....004, 006, 019	Squareview	.....189
Kloss Novabeam	.....068, 069, 174	SSS	.....004, 038
.....183		Starlite	.....038
KTV	.....171, 038, 177, 070	Supre-Macy	.....174
Loewe	.....062	Supreme	.....002
Logik	.....083	Sylvania	.....062, 004, 006, 088
Luxman	.....004, 006	.....076, 116, 008, 019, 068, 069	
LXI	.....000, 062, 006, 073, 162	.....075, 077, 161, 183	
.....181, 049, 072		Symphonic	.....038, 189, 033
Magnavox	.....062, 004, 006, 130	Tandy	.....173
.....134, 183, 008, 019, 068, 069		Tatung	.....003
.....075, 076, 077, 088, 131, 132		Technics	.....054
.....133, 219, 235		Techwood	.....004, 006, 054
Majestic	.....083	Teknika	.....016, 005, 171, 004
Marantz	.....004, 006, 062	.....006, 008, 012, 013, 038, 046	
Megatron	.....006, 059	.....076, 082, 083, 105, 170	
Memorex	.....083, 006, 001	Tera	.....004, 012, 093
.....082, 162		TMK	.....004, 006
MGA	.....005, 004, 006	Toshiba	.....105, 162, 160, 161
.....079, 082, 019, 022, 051, 080		Totevision	.....049, 072, 109, 118
Midland	.....054, 151, 171	.....171	
.....172, 181		Universal	.....052, 087
Minut	.....052	Victor	.....066, 182
Mitsubishi	.....005, 004, 006	Vidtech	.....004, 005, 006
.....125, 082, 081, 019, 022, 051		Viking	.....174
.....079, 080, 135		Wards	.....000, 062, 095, 005
Montgomery Ward	.....083	.....004, 046, 052, 006, 083, 001	
Motorola	.....003, 173	.....019, 024, 033, 068, 069, 075	
MTC	.....005, 004, 105, 006	.....076, 087, 088, 119, 120	
Multitech	.....038	Yamaha	.....004, 005, 006, 019
NAD	.....006, 185, 072	Zenith	.....051, 083, 004, 152
NEC	.....005, 004, 006, 003	.....151, 153, 154, 217	
Nikko	.....006, 016		
NTC	.....016		
Onwa	.....038		
Optimus	.....185		
Optonica	.....095, 173		
Orion	.....191, 035		
Panasonic	.....170, 054, 062, 003		
Philco	.....062, 005, 004, 006, 183		
.....008, 012, 019, 003, 068, 069			
.....075, 077			
Philips	.....062, 004, 075, 008, 019		
.....003, 012, 068, 069, 076, 086			
.....087, 088			
Pilot	.....004, 171		
Pioneer	.....004, 006		
.....090, 091, 092, 136, 179, 185			
Portland	.....016, 005, 171		
.....004, 006			
Price Club	.....105		
Prism	.....054		
Proscan	.....000, 181		
Proton	.....004, 006, 012, 093		
Pulsar	.....151		
Pulsar	.....004		
Quasar	.....003, 054, 070		
Radio Shack / Realistic	.....000		
.....095, 171, 004, 038, 006, 012			
.....049, 162			
RCA	.....000, 100, 005, 003, 004		
.....006, 007, 019, 096, 098, 099			
.....101, 102, 103, 129, 179, 181			
.....188, 190, 203, 233			

## Programming For VCR


1. Manually turn on the VCR.

Find the three-digit code for your VCR in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

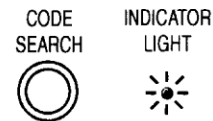

 3. Press and release the **VCR** button (The **INDICATOR LIGHT** will blink then remain lit).



 4. Enter the code using the Number Buttons.

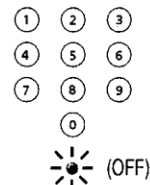


After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your VCR and press the **POWER** button. Your VCR should turn off.




Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

 6. With your VCR on, press **CHAN+**. If the VCR responds, no further programming is required.



 7. Enter your code here for easy reference.

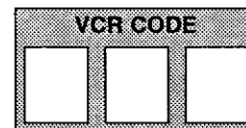

## VCR Code List

Admiral	.....001	Craig	.....013, 014, 023, 061
Adventura	.....026	Curtis-Mathes	.....022, 013, 115
Aiko	.....027	.....024, 000, 009, 016, 018, 021	
Aiwa	.....026	Cybernex	.....013
Akai	.....008, 113, 112, 003	Daewoo	.....027, 025, 015, 017
.....005, 007, 111		.....019, 026, 028, 110	
American High	.....021	Daytron	.....110
Asha	.....013	DBX	.....009, 010
Audio Dynamics	.....009, 010	Dimensia	.....000
Audiovox	.....014	Dynatech	.....026
Bell & Howell	.....011	Electrohome	.....014, 029
Beaumarck	.....013	Electrophonic	.....014
Broksonic	.....031, 025, 012	Emerson	.....014, 025, 026, 065
Calix	.....014	.....041, 015, 012, 021	
Candle	.....014, 013, 015, 018	.....024, 029, 030, 031	
.....016, 017, 019		.....032, 033, 034, 036	
Canon	.....021, 022	.....037, 038, 039, 040	
Capehart	.....020, 110	.....042, 044, 045, 046	
Carver	.....062	.....047, 105, 113, 116	
CCE	.....027, 061	.....117, 130	
Citizen	.....014, 013, 027, 015	Fisher	.....011, 023, 052, 048
.....016, 017, 018, 019		.....049, 050, 051, 118	
Colortyme	.....009	Fuji	.....021, 119
Colt	.....061	Funai	.....026



## VCR Code List Continued

 
Garrard	026	Radix	014
GE	000, 022, 013, 115	Randex	014
	053, 021, 120	Ricoh	128
Goldstar	014, 018, 054, 009	Runco	104
Grandiente	026	Samsung	013, 015, 112, 053
Harley Davidson	026		055, 033
Harman Kardon	009	Sanky	001, 104
Harwood	061	Sansui	010, 092, 111, 123
Headquarter	011	Sanyo	011, 013, 023
Hitachi	055, 120, 056, 057	Scott	025, 065, 015, 012
	107, 111		032, 038, 116
HI-Q	023	Sears	014, 055, 011, 023
Instant Replay	021		118, 021, 028, 048
JCL	021		049, 050, 051, 056, 107
JC Penny	014, 011, 022, 013	Sharp	001, 095, 017, 029
	009, 118, 060, 107		094, 096, 097
	010, 021	Shintom	056, 061, 098
Jensen	055, 056, 111	Shogun	013
JVC	009, 010, 011, 018	Signature	001
	111, 123	Singer	021, 061, 128
Kenwood	009, 010, 123, 111	Sony	099, 119, 098
	011, 016, 018	STS	021, 107
KLH	061	Sylvania	022, 062, 026, 065
Kodak	014, 021		021, 063, 065, 124
Lloyd	026	Symphonic	026
Logik	061	Tandy	011
LXI	014	Tashiko	014
Magnavox	022, 062, 104, 063	Tatung	111
	021, 108, 124	Teac	026, 085, 111
Magnin	013	Technics	021, 109
Marantz	062, 011, 010, 016	Teknika	026, 022, 014, 129
	009, 018, 021, 022, 064		021, 100
Marta	014	TMK	013, 024, 047
Masushita	021	Toshiba	015, 055, 049, 051
MEI	021		065, 116
Memorex	026, 014, 104, 001	Totevision	013, 014
	011, 013, 021, 022, 023	Unitech	013
MGA	029, 065, 113	Vector Research	009, 010
MGN Tech.	013		015, 016
Midland	053	Victor	010
Minolta	055, 056, 107	Video Concepts	009, 010
Mitsubishi	065, 055, 072, 029		015, 016, 113
	056, 066, 067, 068	Videasonic	013
	069, 070, 071, 073	Wards	026, 022, 013, 055
	074, 106, 113, 123		001, 061, 014, 015
Montgomery Ward	001, 075		021, 023, 029, 056
Motorola	001, 021		096, 101, 102, 103
MTC	013, 026		107, 116
Multitech	013, 016, 026	XR-1000	021, 026, 061
	053, 061	Yamaha	009, 010, 011
NEC	064, 076, 011, 010		018, 111
	079, 009, 018, 078	Zenith	104, 119, 098, 128
	111, 123		
Nikko	014		
Noblex	013		
Olympus	021		
Orion	031		
Optimus	001, 014		
Optonica	096		
Panasonic	109, 021, 022, 125		
	126, 127		
Pentax	016, 055, 056		
	107, 120		
Pentax Research	018		
Philco	022, 062, 063, 021		
Philips	062, 096, 022		
	021, 124		
Pilot	014		
Pioneer	055, 010, 080		
	081, 123		
Portland	016, 017, 019, 110		
ProScan	000		
Protec	061		
Pulsar	104		
Quarter	011		
Quartz	011		
Quasar	021, 022, 125		
RCA	089, 000, 055, 022		
	091, 003, 013, 021		
	056, 082, 083, 084		
	085, 086, 087, 088		
	090, 107, 115, 120, 125		
Radio Shack / Realistic	022		
	014, 001, 011, 013		
	023, 021, 026, 029		
	049, 050, 096		

## Programming For Cable Box


1. Manually turn on the Cable Box.

Find the three-digit code for your Cable Box in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

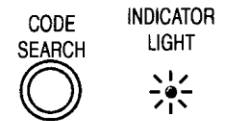

 3. Press and release the **CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).



 4. Enter the code using the Number Buttons.

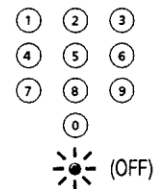


After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your Cable Box and press the **POWER** button. Your Cable Box should turn off.




Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

 6. With your Cable Box on, press **CHAN +**. If the Cable Box responds, no further programming is required.



 7. Enter your code here for easy reference.

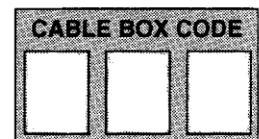

## Cable Box Code List

 
ABC .....	001, 003, 004	Philips .....	011, 012, 013, 019
.....	005, 006, 007	.....	025, 030, 031, 032
Antronix .....	008, 009	Pioneer .....	034, 033
Archer .....	008, 009, 010, 011	RCA .....	000, 047, 049
Cabletenna .....	008	Realistic .....	009
Cableview .....	008	Regal .....	022, 035
Century .....	011	Regency .....	017
Citizen .....	011	Rembrandt .....	003
Colour Voice .....	012, 013	Samsung .....	034
Comtronics .....	015	Scientific Atlanta .....	006, 036
Contec .....	016	.....	037, 038
Eastern .....	017	Signal .....	018
Garrard .....	011	Signature .....	003
GC Electronics .....	009	Sprucer .....	000
Gemini .....	018, 019	Standard Component .....	039
General Instru .....	049, 001, 003	Starcom .....	001, 007, 018
Hamlin .....	035	Stargate .....	018
Hitachi .....	003	Starquest .....	018
Jasco .....	011	Tocom .....	004, 023
Jerrold .....	049, 001, 003, 005	Tusa .....	018
.....	007, 018, 023, 024, 046	TV86 .....	027
Magnavox .....	025	Unika .....	008, 009, 011
Movie Time .....	027, 028	United Cable .....	001
NSC .....	027, 028	Universal .....	008, 009, 010, 011
OAK .....	029, 016	View Star .....	015, 016, 025, 027
Panasonic .....	000, 048	Zenith .....	050, 051

## Programming With Code Search


If your TV, VCR, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

1. Turn on the device you wish to program.

2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.

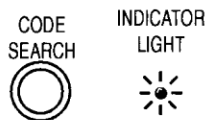

 3. Press and release the device button for the device you are programming (**TV**, **VCR** or **CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.

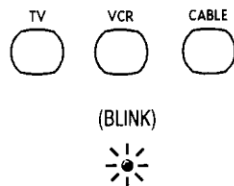


4. Press and release **POWER** until your device turns off.



**Important:** You may have to press **POWER** up to 200 times.

 
5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will go off.




## Retrieving Codes

If you need to find the three-digit code for your TV, VCR or Cable Box after your device is set-up using Code Search, use this procedure.

 
1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.



 
2. Press and release the device button for the device's code you are retrieving (**TV**, **VCR**, or **CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.

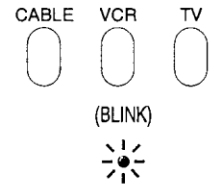

 3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.



 4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.



5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.

6. Repeat step 4 until you have retrieved all three numbers in the code.

## Television Menu Function

The TV Menu is used to make changes in the TV settings such as setting color, channels, timers, etc.

### Entering the TV Menu Mode:

1. Push the **TV** button on the remote.
2. Push the **MENU** button.

This puts the remote in TV Menu Mode. The TV Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in TV Menu Mode.

While in **TV MENU** these buttons will function as follows:

**VOL +/-** buttons will operate as **CURSOR RIGHT/LEFT**.

**CHAN UP/DOWN** keys will operate as **CURSOR UP/DOWN**.

For RCA, GE, & ProScan TVs pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the MENU choice.

Note: Not all functions in competitive models and brands of televisions may be fully supported.

### Exiting the TV Menu Mode:

To exit the Menu Mode and clear the **TV** screen push the **TV** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of TV Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the TV Menu Mode after 10 seconds of inactivity with no buttons being pushed.

### Special notes:

 
 
1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.
3. ZENITH: Push the menu button a second time to move from the **SET-UP MENU** to the **VIDEO MENU**.

## Sleep Feature

This feature will turn off your TV at the time you choose from 1 to 99 minutes.

### To Program Sleep Feature:


1. Press and hold the **SLEEP** button. **INDICATOR LIGHT** will stay lit. Release the **SLEEP** button.
2. Enter time in minutes using the numerical key pad. Indicator light should go off. (Minutes 1 thru 9: press **0** before the actual number Maximum: 99 minutes)
3. Leave remote aimed at television. (Sleep Feature will not work unless remote is left aimed at television.)

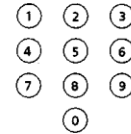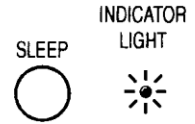

### To Turn Off The Sleep Timer:

Sleep timer program will be cancelled and reset to zero by either of the following:

 1. Press and hold **SLEEP** button until **INDICATOR LIGHT** blinks or press **ON•OFF** button, turning TV OFF.

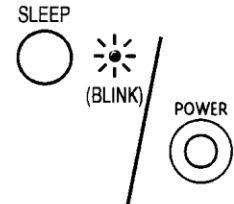

## Trouble Shooting

Problem	Solution
Indicator light not blinking when you press any button	A) Replace the batteries with 2 new AAA Alkaline batteries. B) Check that batteries are properly installed.
The Remote does not operate your device	A) Try all the codes listed for your brand. B) Try the Code Search method on page 9.
Not performing commands properly	Start Code Search over again to locate the proper code.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the <b>REC</b> button twice.
Channel up and down do not function on an RCA TV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required <b>ENTER</b> after a channel, press <b>ENTER</b> after you select a channel.
No response after pressing a button	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed see page 3.
Sleep feature does not work	Remote must remain aimed at television after sleep is set in order for it to work.

Note: Reprogramming may be required after batteries are removed.

## Help Line

If you need additional set-up help please call the Helpline at:  
1-800-420-7229

## RCA Accessories

The following RCA accessories are available through your RCA dealer or by calling 1-800-338-0376.

## RC926 Wireless Phone Jack

 
### Turn Just About Any Electrical Outlet Into A Phone Jack Instantly\*

Exclusive technology sends phone signal through the electrical wiring in your home.

*No Wiring, No Drilling, No Tools!*  
Installs In Two Simple Steps

#### STEP 1

Plug Base Unit into electrical outlet near an existing phone jack, and connect phone jack to Base Unit with included phone cord.

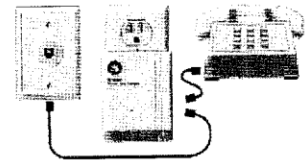

#### STEP 2

Plug Extension Unit into any other electrical outlet and connect phone to Extension Unit.



#### Works With:

Corded Phones  
Cordless Phones  
Answering Machines  
Fax Machines  
Computer Modems

#### Compatible With:

Call Waiting  
Call Forwarding  
Three-Way Calling  
Speed Dialing

RC926  
**\$79<sup>95</sup>**

Plus Shipping/Handling & Sales Tax

## ANT200 Amplified TV Antenna


To receive UHF or VHF stations or serve as a backup for cable outages, purchase the RCA Amplified TV Antenna. Switching between your cable or satellite and your antenna is made easy with an integrated A/B switch. Hooks up to any TV and includes all necessary accessories.

Features include:

- Dipoles tilt and rotate for improved picture
- UHF Loop turn range of 345°
- Gold plated connectors for improved signal conductivity
- Manual Gain Control to Boost Signal
- Five-Year Limited Warranty
- Measures 8½ H. X 8½ W. X 4½ D.

ANT200  
**\$49<sup>95</sup>**

 Plus Shipping/Handling & Sales Tax

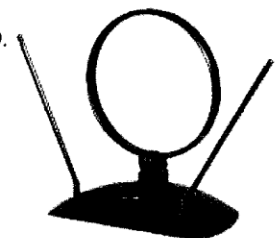

ANT200