

Table Of Contents

| | |
|------------------------------------|-----|
| Button Description..... | 2-3 |
| Battery Installation | 3 |
| Programming Your Universal Remote | |
| TV..... | 4 |
| TV Codes | 4-5 |
| VCR | 5-6 |
| VCR Codes | 6-7 |
| DBS | 7 |
| DBS Codes | 7 |
| Cable Box..... | 7-8 |
| Cable Box Codes | 8 |
| DVD..... | 9 |
| DVD Codes..... | 9 |
| Programming With Code Search | 9 |
| Retrieving Codes..... | 10 |
| TV Menu | 11 |
| DBS Menu..... | 12 |
| DVD Menu | 13 |
| Trouble Shooting | 14 |

This RCA Universal Remote Is Compatible With
Most Models Of The Following Brands

(Of Infrared Remote Controlled Components manufactured after 1990):



Button Description

INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

OFF/ON

The OFF/ON button operates the same as your original remote
 Note: Some RCA, GE and ProScan models require you to press the device button to turn the device on and the OFF/ON button to turn the device off.

CODE SEARCH

Used to program the remote or to search through codes.

DBS/CABLE, VCR/DVD, TV

The DBS/CABLE, VCR/DVD, and TV buttons are used to select the device you want to control.

REW, PLAY, FF, REC, PAUSE, STOP

The REW, PLAY, FF, REC, PAUSE, and STOP buttons operate the same as on your original VCR remote. You must press the RECORD button **twice** to begin recording.

TV/VCR

The TV/VCR button operates the TV/VCR function of your VCR.

ENTER

The ENTER button is used to complete channel selection for some brands of TV. It is also used to complete the code entry process.

VOL & CHAN

The VOL (Volume) and CHAN (Channel) buttons increase or decrease the channel numbers or volume.

MUTE

To MUTE the volume on the TV.

PREV CH

PREV CH allows you to go to the previous channel you selected. Operates the same as Last Channel, Go Back or Recall button on your original remote.

0-9

The number buttons operate the same as on your original remote, and are used for entering device codes or channel numbers.

MENU

 
The MENU button calls up the TV set up menu.

Programming For TV


1. Manually turn on the TV.

Find the three-digit code for your TV in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



 
3. Press and release the **TV** button (The **INDICATOR LIGHT** will blink then remain lit).



 4. Enter the code using the Number Buttons.



 After your code is entered, the **INDICATOR LIGHT** will turn off.



5. Aim the remote at your TV and press the **OFF/ON** button. Your TV should turn off.




Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your TV on, press **CHAN+**. If the TV responds, no further programming is required.



7. Enter your code here for easy reference.

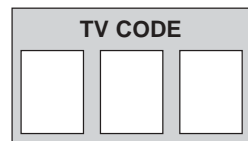


Battery Installation

Your Universal Remote requires 2 new AAA alkaline batteries.

To install the batteries:

1. Remove the battery compartment cover.

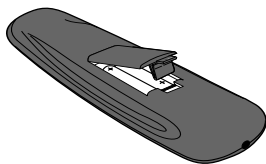

2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.

3. Press and push the battery cover back into place.

Note: Reprogramming may be required after batteries are removed.

TV Code List

| | | | |
|---------------------|-------------------------|--|-------------------------|
| Abex..... | 172 | Electrohome | 004, 006 |
| Admiral | 001, 173 | Emerson | 002, 003, 019, 022 |
| Advertura | 174 |038, 046, 006, 012, 023, 024, 025 | |
| Aiko | 016 |026, 027, 028, 029, 031, 032, | |
| Akai | 002 |033, 034, 035, 036, 037, 039 | |
| Alleron | 046 |041, 042, 043, 044, 047, 123 | |
| Amtron | 038 |041, 042, 043, 044, 047, 123 | |
| Anam National | 003, 038 |124, 162, 177, 179 | |
| AOC | 006, 005, 004, 007 | Envision | 004, 006 |
| Audiovox | 038 | Fisher | 048, 049, 051, 162, 180 |
| Belcor | 004 | Fujitsu | 046 |
| Bell & Howell | 001, 083, 162 | Funai | 038, 046 |
| Bradford | 038 | Futuretec | 038 |
| Brokwood | 004 | GE | 000, 054, 003, 004, 006 |
| Candle | 004, 006, 008, 174 |022, 052, 055, 087, 164, 165 | |
| Celebrity | 002 |166, 167, 168, 181 | |
| Citizen | 016, 171, 004, 006, 008 | Gibraltar | 004, 151 |
| | 038, 105, 174, 177 | Grundy | 171, 038, 046 |
| Colortyme | 004, 006 | Hallmark | 004, 006 |
| Concerto | 004, 006 | Harvard | 038 |
| Contec / Cony | 012, 013, 038 | Hitachi | 059, 004, 148, 006, 012 |
| Craig | 038 |013, 060, 061, 135, 136, 137 | |
| Crown | 038, 171 |138, 139, 140, 141, 142, 143 | |
| Curtis Mathes | 171, 000, 004 |144, 145, 146, 150, 179 | |
| | 006, 015, 105, 162 | IMA | 038 |
| CXC | 038 | Infinity | 082 |
| Daewoo | 016, 190, 005 | Janeil | 174 |
| Daytron | 171, 004, 006, 017, 127 | JBL | 062 |
| | 004, 006, 171 | JCB | 002 |
| Dimensia | 000 | JC Penny | 000, 054, 005, 171 |
| Dumont | 004, 151 |004, 052, 006, 172, 008, 022, 058 | |
| Dynatech | 004 |063, 064, 072, 087, 105, 181 | |
| Electroband | 002 | Jensen | 004, 006 |

VCR Code List Continued

| | |
|---------------------------------|-------------------------------|
| Randex.....014 |065, 116 |
| Ricoh.....128 | Totevision.....013, 014 |
| Runco.....104 | TMK.....013, 024, 047 |
| Samsung.....013, 015, 112, 053 | Unitech.....013 |
|055, 033 | Vector Research.....009, 010 |
| Sankyo.....001, 104 | Victor.....015, 016 |
| Sansui.....010, 092, 111, 123 | Video Concepts.....009, 010 |
| Sanyo.....011, 013, 023 |015, 016, 113 |
| Scott.....025, 065, 015, 012 | Videosonic.....013 |
|032, 038, 116 | Wards.....026, 022, 013, 055 |
| Sears.....014, 055, 011, 023 |001, 061, 014, 015 |
|118, 021, 028, 048 |021, 023, 029, 056 |
|049, 050, 051, 056, 107 |096, 101, 102, 103 |
| Sharp.....001, 095, 017, 029 |107, 116 |
|094, 096, 097 | XR-1000.....021, 026, 061 |
| Shintom.....056, 061, 098 | Yamaha.....009, 010, 011 |
| Shogun.....013 |018, 111 |
| Signature.....001 | Zenith.....104, 119, 098, 128 |
| Singer.....021, 061, 128 | |
| Sony.....099, 119, 098 | |
| STS.....021, 107 | |
| Sylvania.....022, 062, 026, 065 | |
|021, 063, 065, 124 | |
| Symphonic.....026 | |
| Tandy.....011 | |
| Tashiko.....014 | |
| Tatung.....111 | |
| Teac.....026, 085, 111 | |
| Technics.....021, 109 | |
| Teknika.....026, 022, 014, 129 | |
|021, 100 | |
| Toshiba.....015, 055, 049, 051 | |

Programming For DBS

Follow same instructions for programming Cable Box but use DBS code list.

The DBS codes are programmed using the DBS/CABLE key.

DBS Code List


| | |
|--------------------------------|---------------------------|
| Alphastar.....079 | Philips.....085 |
| Echostar (Dish System).....089 | Primostar.....076 |
| Echosphere (Dish Net).....078 | Proscan.....071, 080, 081 |
| GE.....071, 080, 081 | RCA.....071, 080, 081 |
| Hitachi SYS I.....084 | Sony.....072 |
| Hitachi SYS II.....083 | Toshiba.....073 |
| Hughes.....083, 077, 090 | Uniden.....086 |
| Magnavox.....085 | |
| JVC.....082 | |
| Panasonic.....075 | |

Programming For Cable Box


1. Manually turn on the Cable Box.

Find the three-digit code for your Cable Box in the code list below.

 2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.




 3. Press and release the **DBS/CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).



Programming For Cable Box Continued

4. Enter the code using the Number Buttons.

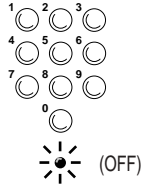

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your Cable Box and press the **OFF/ON** button. Your Cable Box should turn off.




Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your Cable Box on, press **CHAN+**. If the Cable Box responds, no further programming is required.



7. Enter your code here for easy reference.

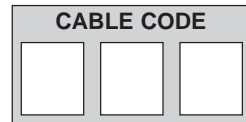


Cable Box Code List

| | |
|----------------------------------|----------------------------------|
| ABC.....001, 003, 004 | Samsung.....034 |
| Archer.....005, 006, 007 | Scientific Atlanta.....006, 036 |
| Antronix.....008, 009 | 037, 038 |
| Archer.....008, 009, 010, 011 | Signal.....018 |
| Cabletenna.....008 | Signature.....003 |
| Cableview.....008 | Sprucer.....000 |
| Century.....011 | Standard Component.....039 |
| Citizen.....011 | Starcom.....001, 007, 018 |
| Colour Voice.....012, 013 | Stargate.....018 |
| Comtronics.....015 | Starquest.....018 |
| Contec.....016 | Tocom.....004, 023 |
| Eastern.....017 | Tusa.....018 |
| Garrard.....011 | TV86.....027 |
| GC Electronics.....009 | Unika.....008, 009, 011 |
| Gemini.....018, 019 | United Cable.....001 |
| General Instru.....049, 001, 003 | Universal.....008, 009, 010, 011 |
| Hamlin.....035 | View Star.....015, 016, 025, 027 |
| Hitachi.....003 | Zenith.....050, 051 |
| Jasco.....011 | |
| Jerrold.....049, 001, 003, 005 | |
|007, 018, 023, 024, 046 | |
| Magnavox.....025 | |
|027, 028 | |
| Movie Time.....027, 028 | |
| NSC.....029, 016 | |
| OAK.....000, 048 | |
| Panasonic.....011, 012, 013, 019 | |
| Philips.....025, 030, 031, 032 | |
| Pioneer.....034, 033 | |
| RCA.....047, 000, 049 | |
| Realistic.....009 | |
| Regal.....022, 035 | |
| Regency.....017 | |
| Rembrandt.....003 | |

Programming For DVD

Follow same instructions for programming VCR but use DVD code list.

The DVD codes are programmed using the VCR/DVD key.

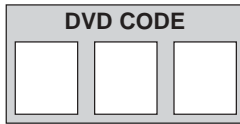



DVD Code List

| | | | |
|------------------|---------------|---------------|---------------|
| Aiwa | 350 | RCA | 160 |
| Hitachi | 351 | Sanyo | 359 |
| JVC | 161, 352 | Sony | 166, 360, 361 |
| Konka | 353, 354 | Toshiba | 167, 362, 363 |
| Magnavox | 162, 356, 357 | Zenith | 364 |
| Mitsubishi | 163 | | |
| Panasonic | 355 | | |
| Philips | 162, 356, 357 | | |
| Pioneer | 165 | | |
| ProScan | 160 | | |

Programming With Code Search

If your TV, VCR, DVD, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

 
1. Turn on the device you wish to program.
 2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.
 3. Press and release the device button for the device you are programming (**TV, VCR/DVD** or **DBS/CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.
 4. Press and release **OFF/ON** until your device turns off.
- Important:** You may have to press **OFF/ON** up to 200 times.
5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will go off.

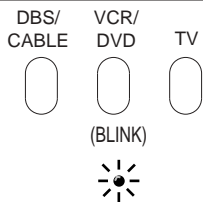


Retrieving Codes

If you need to find the three-digit code for your TV, VCR, DBS, DVD or Cable Box after your device is set-up using Code Search, use this procedure.

 
1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.




2. Press and release the device button for the device's code you are retrieving (**TV, VCR/DVD, or DBS/CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.

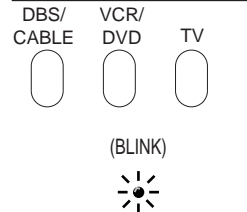

 3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.



 4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.



5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.
6. Repeat step 4 until you have retrieved all three numbers in the code.

Television Menu Function

The TV Menu is used to make changes in the TV settings such as setting color, channels, timers, etc.

Entering the TV Menu Mode:

1. Push the **TV** button on the remote.
2. Push the **MENU** button.

This puts the remote in TV Menu Mode. The TV Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in TV Menu Mode.

While in **TV MENU** these buttons will function as follows:

VOL UP/DOWN buttons will operate as **CURSOR RIGHT/LEFT**.

CHAN+/- keys will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan TVs pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the MENU choice.

Note: Not all functions in competitive models and brands of televisions may be fully supported.

Exiting the TV Menu Mode:

To exit the Menu Mode and clear the **TV** screen push the **TV** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of TV Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the TV Menu Mode after 10 seconds of inactivity with no buttons being pushed.

Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.
3. ZENITH: Push the menu button a second time to move from the **SET-UP MENU** to the **VIDEO MENU**.

TV



MENU

(BLINK)



VOL



CHAN



MENU

TV



DBS Menu Function

The DBS Menu is used to navigate thru the Guide screens, to make changes in the DBS settings such as channel lists, passwords, etc.

Entering the DBS Menu Mode:

1. Push the **DBS•CABLE** button on the remote.
2. Push the **MENU** key.

This puts the remote in DBS Menu Mode. The DBS Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in DBS Menu Mode.

While in **DBS MENU MODE** these buttons will function as follows:

VOLUME UP/DOWN button will operate as **CURSOR RIGHT/LEFT**.

CH+/- button will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan DBS systems pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice. The **ENTER** key may also be used to select all menu choices.

Note: Not all functions in competitive models and brands of DBS systems may be fully supported.

Exiting the DBS Menu Mode:

Push the **DBS•CABLE** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DBS Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the DBS Menu Mode after 10 seconds of inactivity with no keys being pushed.

Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.

DBS/
CABLE



MENU

(BLINK)



VOL



CHAN



MENU



ENTER

DBS/
CABLE



DVD Menu Function

The DVD Menu is used to navigate thru the Navigation screens, to change settings such as language, sub-titles, etc.

Entering the DVD Menu Mode:

1. Push the **VCR/DVD** button on the remote.
2. Push the **MENU** key.



This puts the remote in DVD Menu Mode. The DVD Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in DVD Menu Mode.



While in DVD MENU MODE these buttons will function as follows:

VOLUME UP/DOWN button will operate as **CURSOR RIGHT/LEFT**.



CH+/- button will operate as **CURSOR UP/DOWN**.



Pushing the **ENTER** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice.



Note: Not all functions in competitive models and brands of DVD systems may be fully supported.

Exiting the DVD Menu Mode:

Push the **VCR/DVD** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DVD Menu Mode and will revert to its normal mode of operation.



Note: The remote will automatically exit the DVD Menu Mode after 15 seconds of inactivity with no keys being pushed.

Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.

Trouble Shooting

| Problem | Solution |
|--|---|
| Indicator light not blinking when you press any button | A) Replace the batteries with 2 new AAA Alkaline batteries. B) Check that batteries are properly installed. |
| The Remote does not operate your device | A) Try all the codes listed for your brand. B) Try the Code Search method (page 9). |
| Not performing commands properly | Start Code Search over again to locate the proper code. |
| Problems programming a TV/VCR Combo Unit | Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation. |
| VCR not recording | As a safety feature on your remote, you must press the REC button twice. |
| Channel up and down do not function on an RCA TV | Due to some designs, the original remote will only perform these functions. |
| Problems changing channels | If your original remote required ENTER after a channel, press ENTER after you select a channel. |
| No response after pressing a button | A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed. (See page 3). |

Note: Reprogramming may be required after batteries are removed.

Questions

Please visit www.rca.com

RCA Accessories

The following RCA accessories are available through your RCA dealer or by calling 1-800-338-0376.

RC926 Wireless Phone Jack


Turn Just About Any Electrical Outlet Into A Phone Jack Instantly

Exclusive technology sends phone signal through the electrical wiring in your home.

No Wiring, No Drilling, No Tools!
Installs In Two Simple Steps


STEP 1

Plug Base Unit into electrical outlet near an existing phone jack, and connect phone jack to Base Unit with included phone cord.

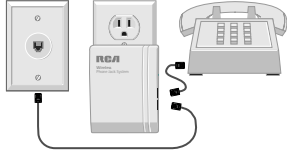

STEP 2

Plug Extension Unit into any other electrical outlet and connect phone to Extension Unit.

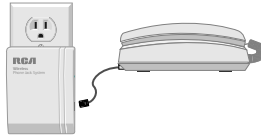

Works With:

- Corded Phones
- Cordless Phones
- Answering Machines
- Fax Machines
- Computer Modems

Compatible With:

- Call Waiting
- Call Forwarding
- Three-Way Calling
- Speed Dialing

RC926
\$79⁹⁵
Plus Shipping/Handling
& Sales Tax

ANT200 Amplified TV Antenna

To receive UHF or VHF stations or serve as a backup for cable outages, purchase the RCA Amplified TV Antenna. Switching between your cable or satellite and your antenna is made easy with an integrated A/B switch. Hooks up to any TV and includes all necessary accessories.

Features include:

- Dipoles tilt and rotate for improved picture
- UHF Loop turn range of 345°
- Gold plated connectors for improved signal conductivity
- Manual Gain Control to Boost Signal
- Five-Year Limited Warranty
- Measures 8¾ H. X 8½ W. X 4¼ D.

ANT200
\$45⁹⁵
Plus Shipping/Handling
& Sales Tax



ANT200

How To Order

To order, see your local RCA retailer. Or:

ORDER BY PHONE:

Have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. This number should only be used to place orders for the above-listed Accessories.

1-800-338-0376

ORDER BY MAIL:

Complete this order form and mail to:

RCA Accessories
PO Box 8419
Ronks, PA 17573

Include this completed form with your order.

| Description | Model # | Price | Qty. | Total |
|-----------------------|---|---------|------|--------|
| Wireless Phone Jack | RC926 | \$79.95 | | |
| Amplified TV Antenna | ANT200 | \$45.95 | | |
| Sales Tax | We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent. | | | |
| Shipping and Handling | | | | \$5.00 |
| Total Amount Due | | | | |

Name: _____

Address: _____

City/State: _____

Zip: _____

Daytime Phone Number: _____

Check Enclosed

Money Order Enclosed

Visa

MasterCard

Discover

Card Number:

□□□□ - □□□□ - □□□□ - □□□□

Exp: _____

Signature: _____

Shipping and handling is charged for all orders.

Please allow 4-6 weeks for mail orders.

Limited 90 Day Warranty

Thomson multimedia Inc. warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it postage prepaid to the Product Exchange Center address for prompt, no charge replacement with a current equivalent. This replacement is Thomson multimedia Inc.'s sole obligation under this warranty. Thomson multimedia Inc. will not be responsible for any incidental or consequential damages or for any loss arising in connection with the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

© 2001 Thomson multimedia Inc.
Product Exchange Center
11721 Alameda Ave.
Socorro, TX 79927
PRCU300 Rev0901

Trademark(s) ®Registered Marca(s) Registrada(s)
Made in Indonesia
www.rca.com

RCA

